

# PS-X55

*US Model  
AEP Model  
UK Model  
Canadian Model  
E Model*




## STEREO TURNTABLE SYSTEM

### SPECIFICATIONS


#### GENERAL

- Power Requirements:** 120 V ac, 60 Hz (US, Canadian model)  
220 V ac, 50/60 Hz (AEP model)  
240 V ac, 50/60 Hz (UK model)  
110 – 120 V or 220 – 240 V ac adjustable,  
50/60 Hz (E model)
- Power Consumption:** 12 W
- Dimensions:** Approx. 430 (w) x 135 (h) x 375 (d) mm  
17 (w) x 5  $\frac{3}{8}$  (h) x 14  $\frac{7}{8}$  (d) inches  
including projecting parts and controls
- Weight:** Approx. 8 kg, 17 lb 10 oz (net)  
Approx. 9.4 kg, 20 lb 12 oz  
(in shipping carton)

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

#### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES, LES VUES EXPLOSÉES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

#### TURNTABLE

- Platter:** 31 cm (12  $\frac{1}{4}$  inches), aluminum-alloy diecast
- Motor:** Linear BSL (brushless and slotless) motor
- Drive System:** Direct drive
- Control System:** Crystal lock control, magnedisc servo control system
- Speed:** 33  $\frac{1}{3}$  rpm, 45 rpm
- Starting Characteristics:** Comes to nominal speed within a half revolution (33  $\frac{1}{3}$  rpm)
- Wow and Flutter:** 0.02 % (WRMS)  
\*0.025 % (WRMS)  
± 0.04 % (DIN)
- S/N Ratio:** 78 dB (DIN-B)
- Load Characteristics:** 0 % up to 100 g stylus force  
(at lead-in groove of a record)
- Speed Deviation:** Within ± 0.003 %
- Automatic System:** Lead-in, return, reject, repeat, record size selection

— Continued on page 2 —

\* This new measuring method concerns only the turntable assembly, including the platter. It excludes wow and flutter caused by the tonearm, the cartridge, or the record.  
Measured by obtaining signal from magnetic pick-up head.

# SONY<sup>®</sup>

## SERVICE MANUAL


TONEARM

Type: Statically balanced  
Pivot-to-stylus Length: 216.5 mm (8 1/2 inches)  
Overall Arm Length: 300 mm (11 7/8 inches)  
Overhang: 16.5 mm (2/3 inches)  
Tracking Error: +3° to -1°  
Stylus Force Adjustment Range: 0 - 2.5 g  
Cartridge Shell Weight: 5 g  
Cartridge Weight Range: 7.5 - 11.5 g  
(including supplied headshell) 11 - 15 g (with extra weight)

CARTRIDGE

Type: Moving-magnet  
Frequency Response: 10 - 30,000 Hz  
Channel Separation: 25 dB at 1 kHz  
Output Voltage: 3 mV at 1 kHz, 5 cm/sec, 45°  
Load Impedance: 50 kΩ - 100 kΩ  
Tracking Force: 1.0 - 2.0 g (1.5 g recommended)  
Stylus: Sony ND-200E  
Elliptical (0.3 x 0.8 mil), nude diamond  
Weight: 3.5 g


MODEL IDENTIFICATION  
- Specification Label -

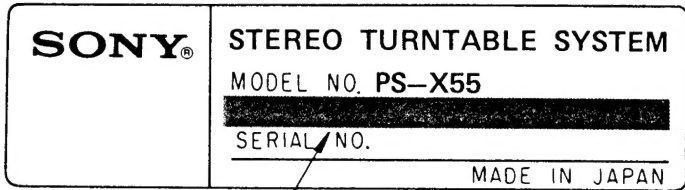


US, Canadian model	: AC 120V	60Hz	12W
AEP model	: AC 220V	~50/60Hz	12W
UK model	: AC 240V	~50/60Hz	12W
E model	: AC 110-120V, 220-240V	~50/60Hz	12W

- Power Cord -

E model: euro-plug 1-551-530-00

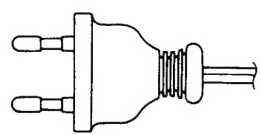


E model: parallel-blade plug 1-551-473-31

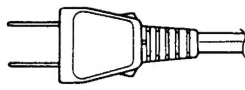

# SECTION 1 OUTLINE

## 1-1. BLOCK DIAGRAM

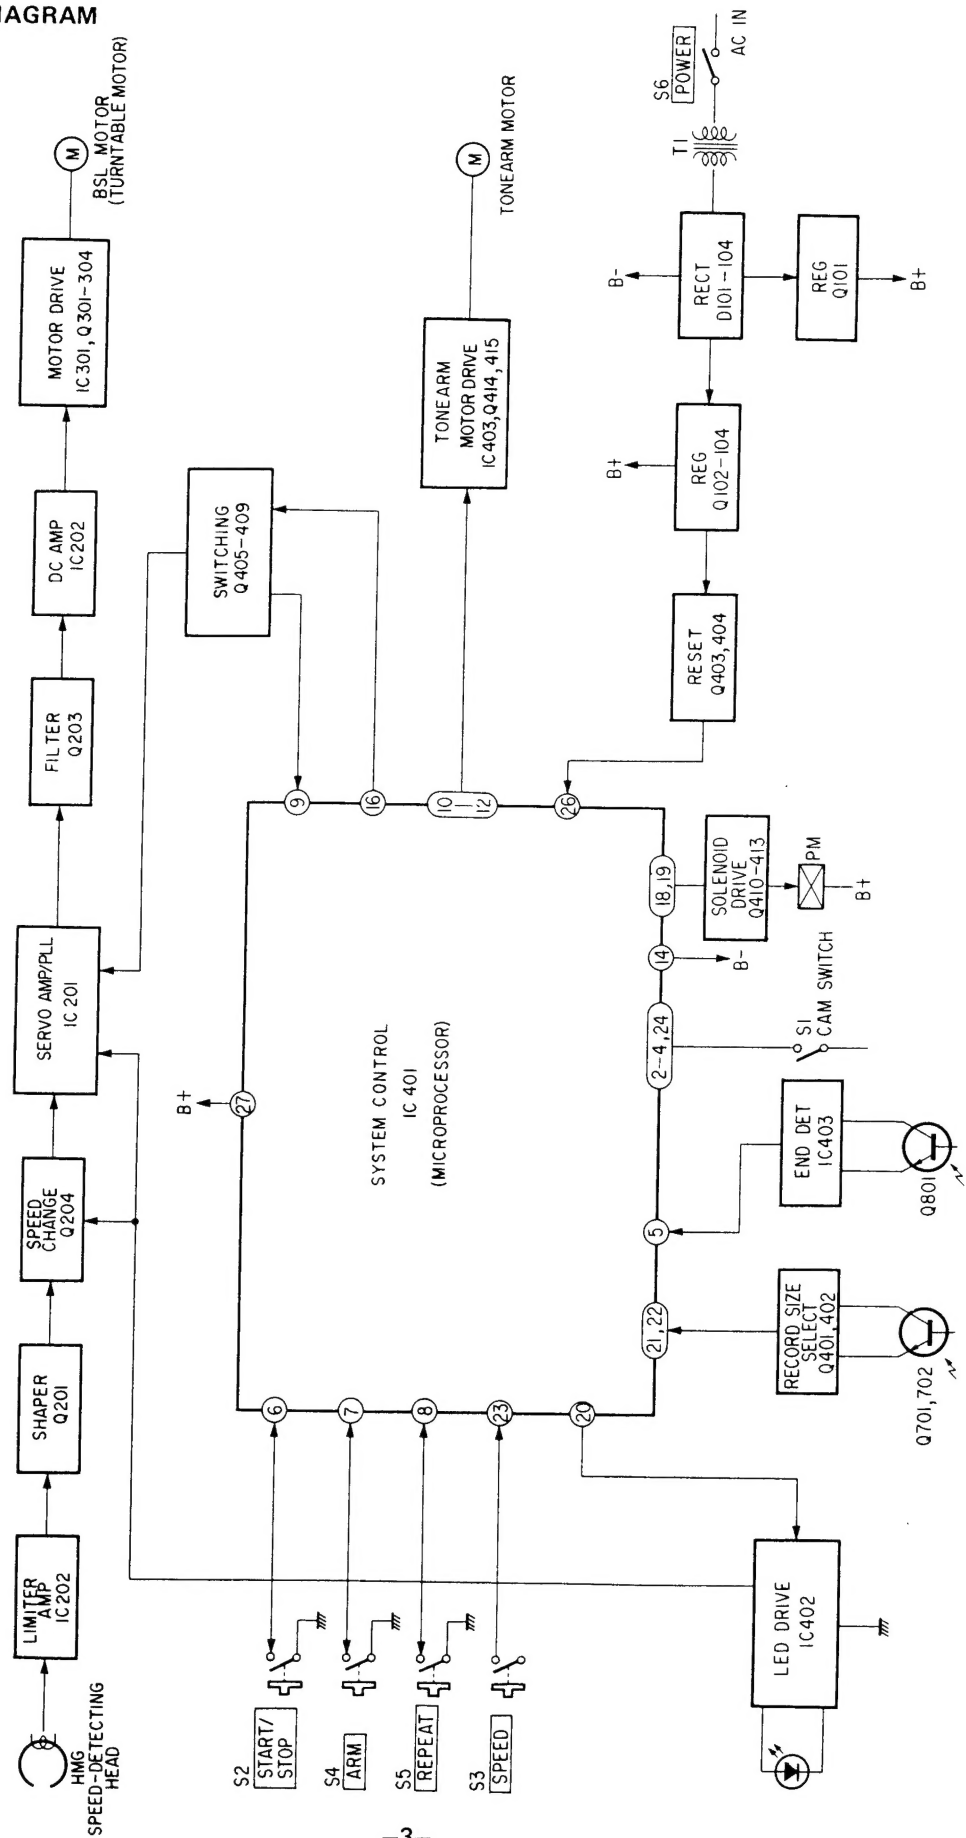


## SECTION 2 DISASSEMBLY

**Note:** Follow the disassembly procedure in the numerical order given.


### TURNTABLE/DUST COVER/BOTTOM PLATE REMOVAL

- ❶ : TURNTABLE
- ❷ : DUST COVER
- ❸ : BOTTOM PLATE

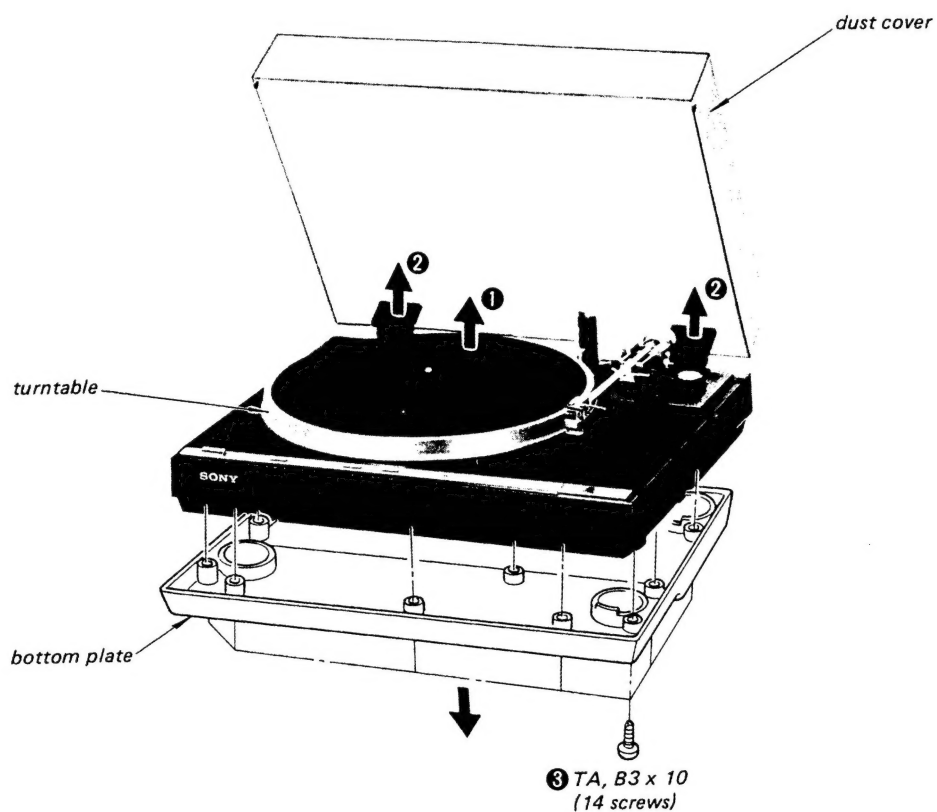


### SERVICING NOTE



*Bottom view of turntable*

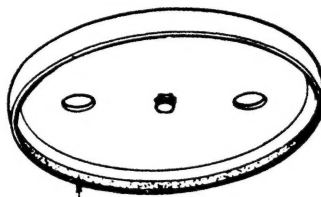


## TONEARM SECTION REMOVAL

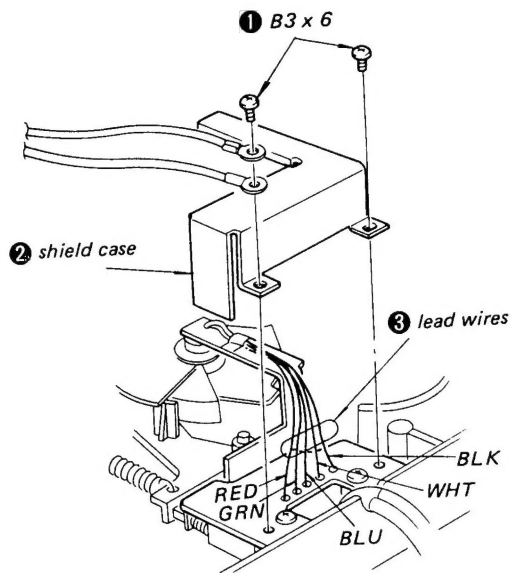


## NOTE ON BRAKE DRUM INSTALLATION

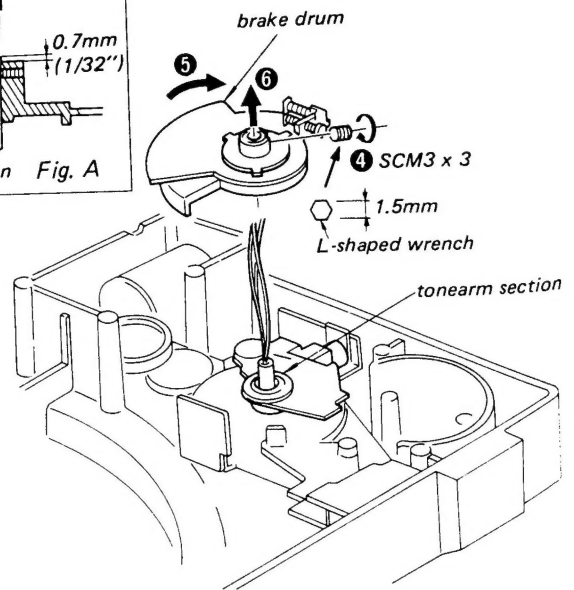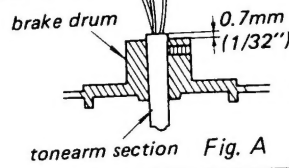


## CONTROL CAM/LEAD-IN LEVER INSTALLATION

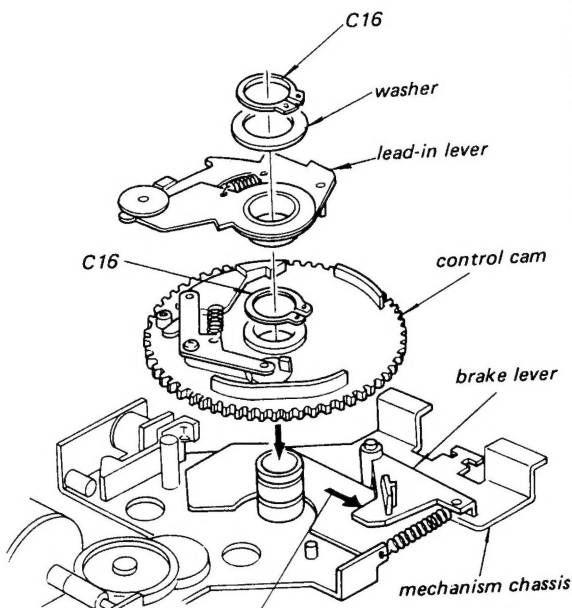



Push the brake lever and insert the control cam as shown in Fig. B.

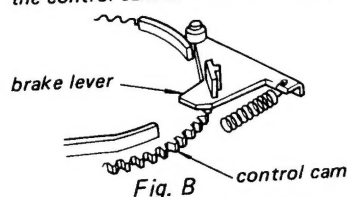

## GEAR A/GEAR B INSTALLATION

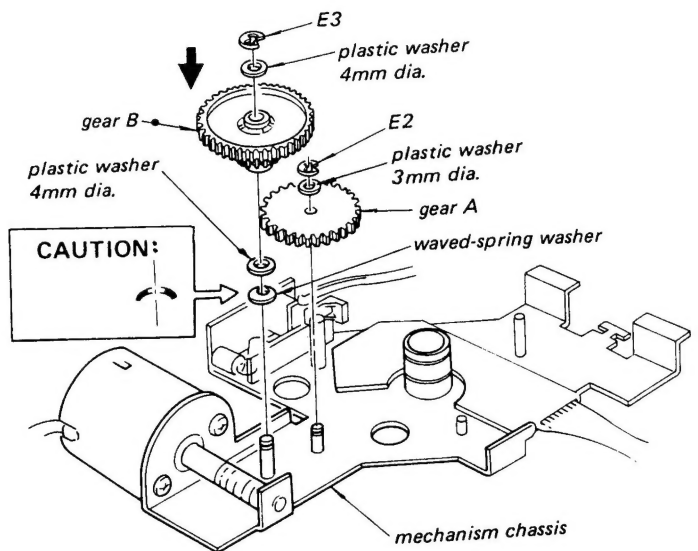


# NOTE ON BRAKE DRUM INSTALLATION

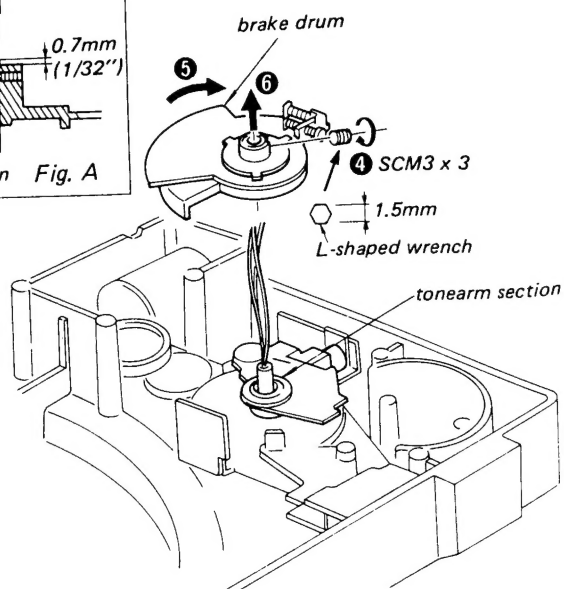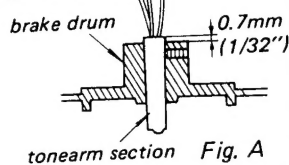


7 TA, B3 x 10


7 TA, B3 x 10

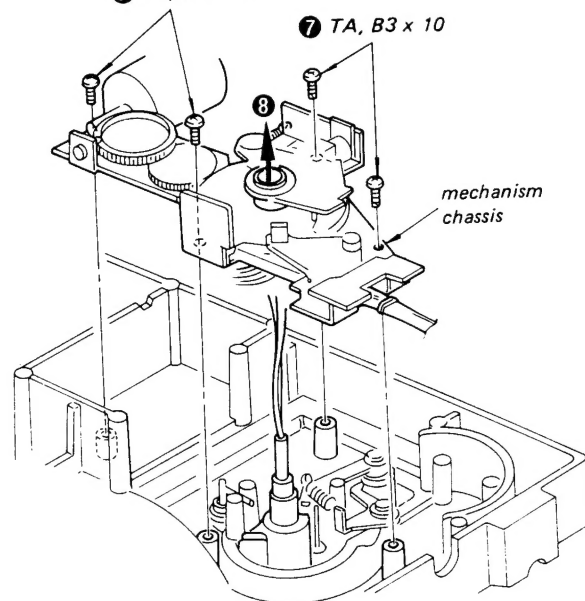



## GEAR A/GEAR B INSTALLATION

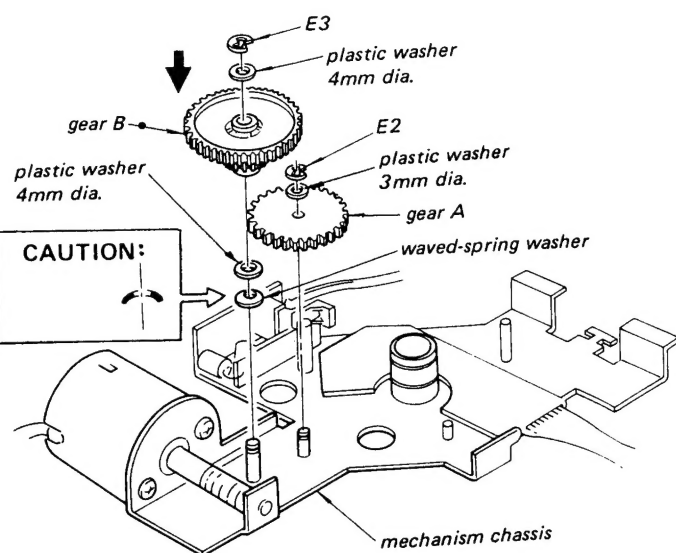


## LEAD WIRE CONNECTION

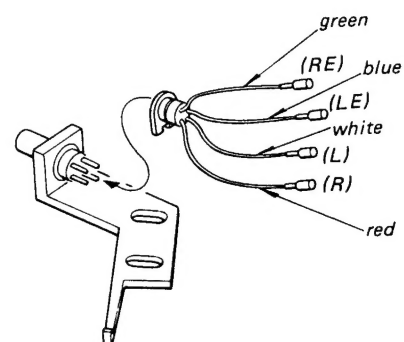

blue: left channel (ground)  
white: left channel (signal)  
green: right channel (ground)  
red: right channel (signal)

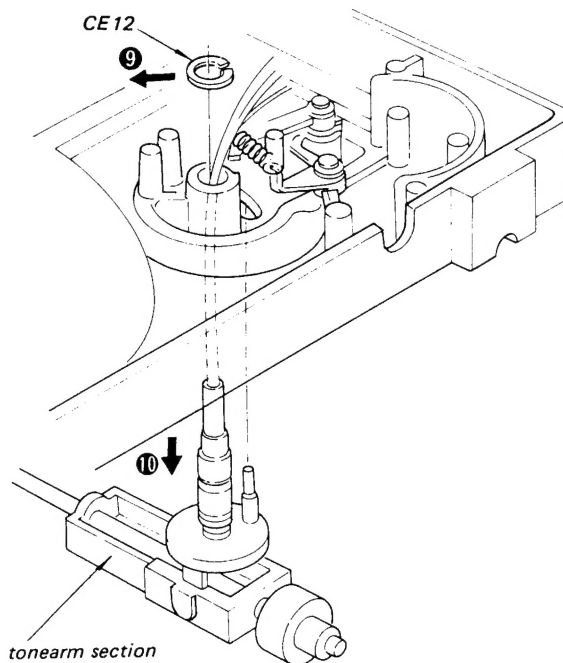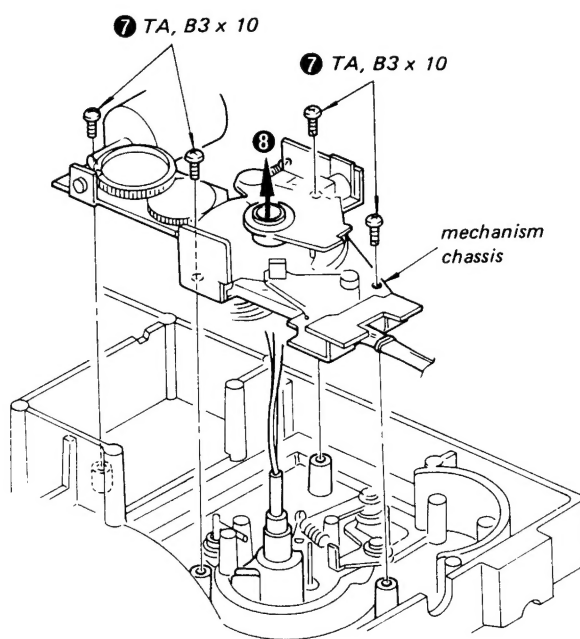


#### LEAD WIRE CONNECTION


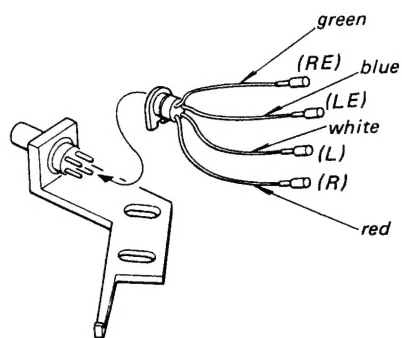


blue: left channel (ground)  
white: left channel (signal)  
green: right channel (ground)  
red: right channel (signal)



#### CARTRIDGE INSTALLATION

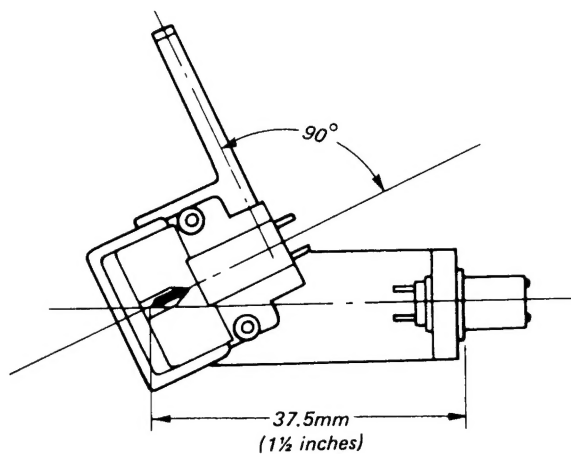

## TONEARM ASSEMBLY

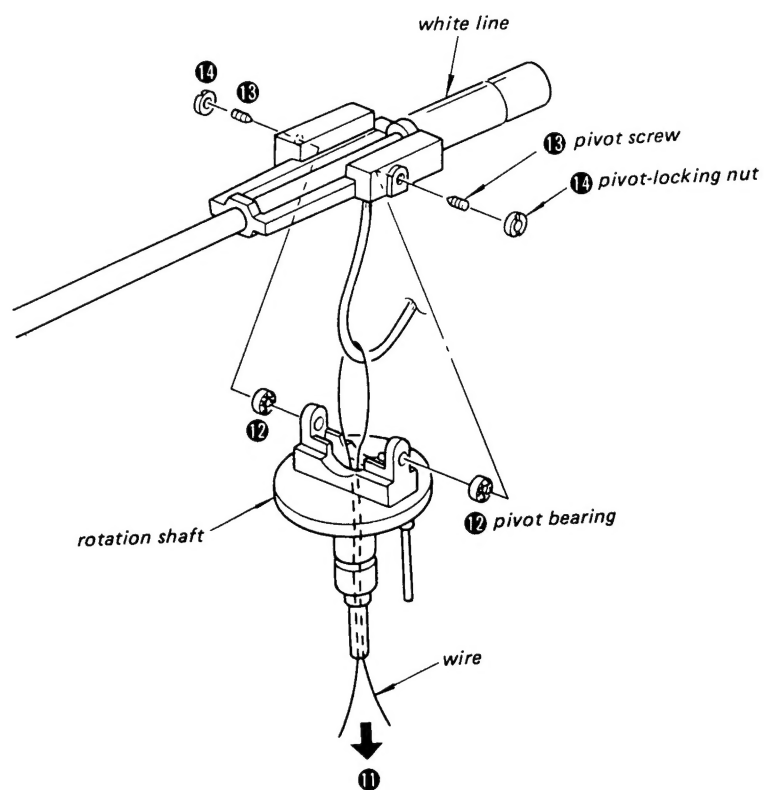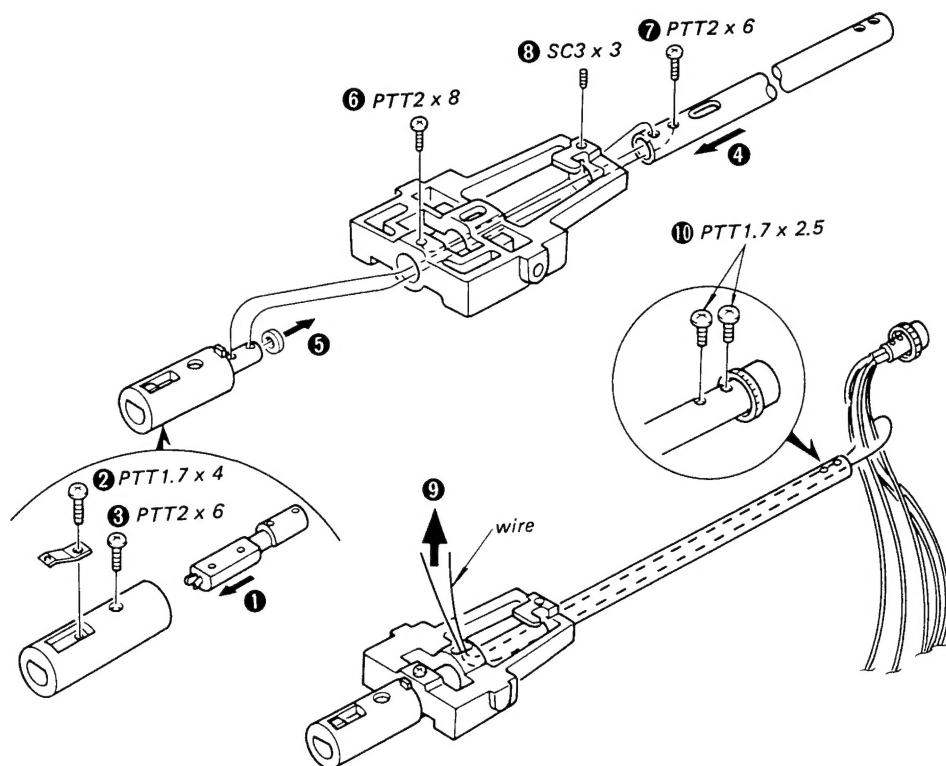




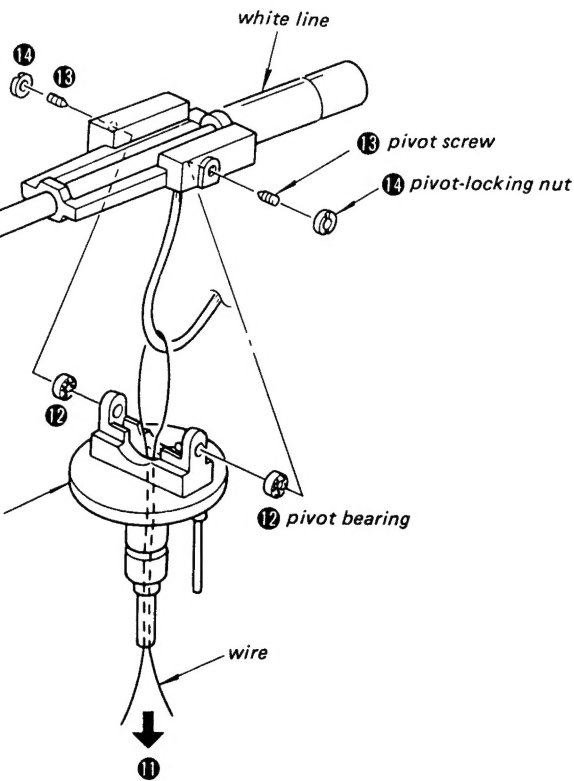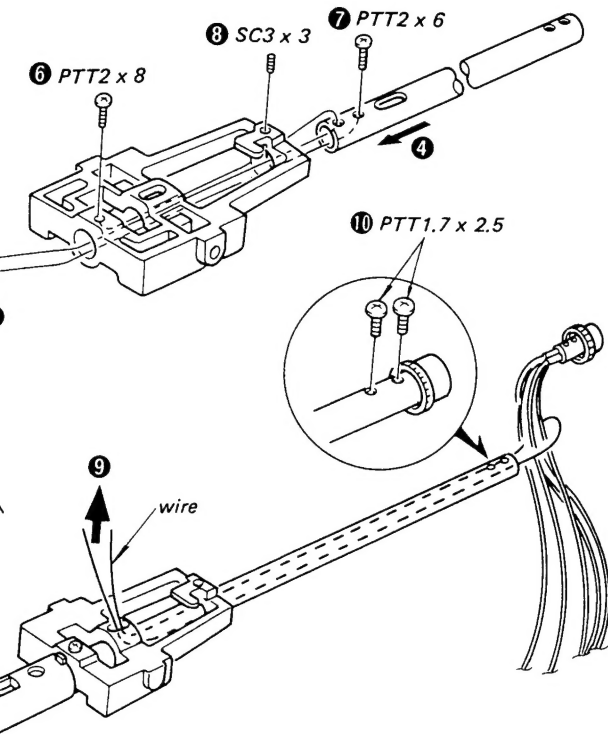

### Longitudinal Sensitivity Adjustment

1. Make the longitudinal balance adjustment to the tonearm.
2. Repeating the following procedures, adjust the pivot screw and the pivot-locking nut.
  - a. When the 70 mg weight is placed on the tonearm, the tonearm sinks more than 5 mm (measured at stylus-tip.)
  - b. When the weight is removed, the tonearm returns horizontally.



**Note:** Rotate the left and right pivot screws by equal numbers of turns.

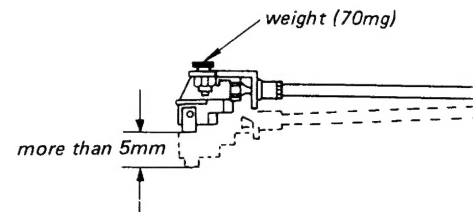

SECTION 3  
ADJUSTMENTS**Longitudinal Sensitivity Adjustment**



1. Make the longitudinal balance adjustment of tonearm.
2. Repeating the following procedures, adjust the pivot screw and the pivot-locking nut.
  - a. When the 70 mg weight is placed on the top of the shell, the tonearm sinks more than 5 mm (measured at stylus-tip.)
  - b. When the weight is removed, the tonearm returns horizontally.

**Note:** Rotate the left and right pivot screws by same numbers of turns.

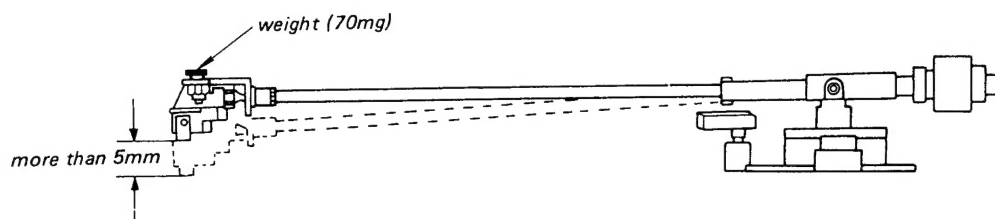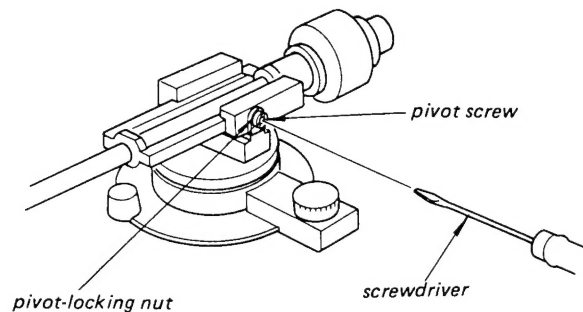

### Stylus Height Adjustment



1. Bring the tonearm above the record.
2. Lift the arm lifter up and make sure that the clearance between the stylus tip and the record is 4 – 10 mm (3/16 – 13/32 inches).
3. If necessary, loosen the set screw and adjust the arm lifter height.

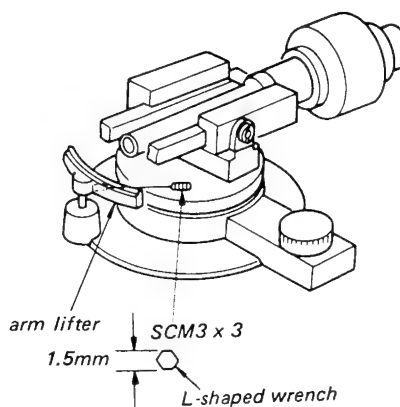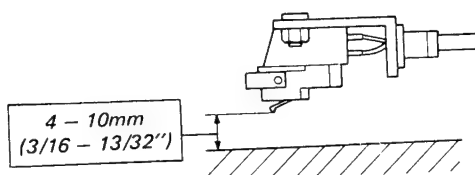


### Automatic Return Position Adjustment

1. Confirm that clearance **A** is 1 mm (1/32 inches) as shown below.
2. Set the SPEED to 33 rpm.
3. Set the stylus on the groove of the test record (YFSC-16).
4. Adjust the adjustment screw so that the count is 10 – 13 just when the tonearm operation indicator first lights up.

Turning direction	Count of return-point
clockwise	large figure
counterclockwise	small figure

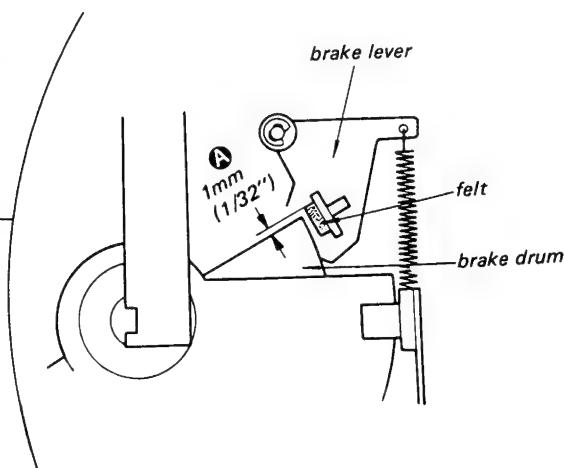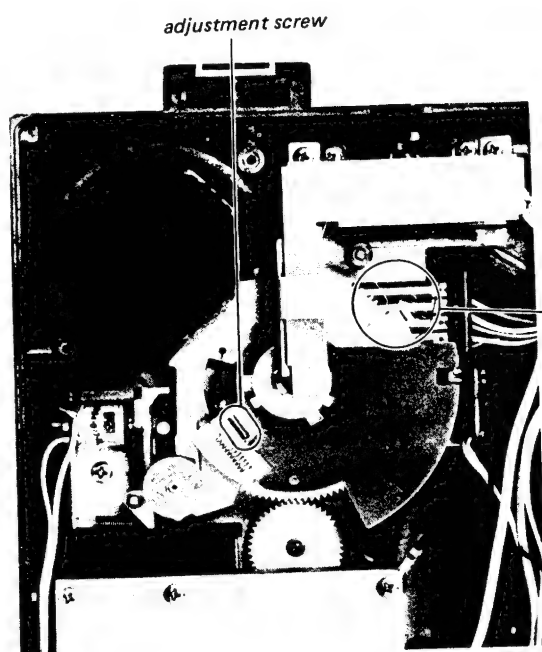


# PS-X55 PS-X55

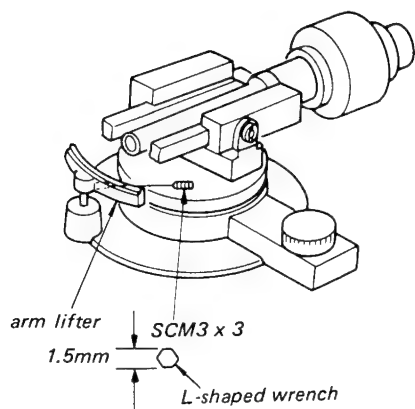


tonearm operation indicator

4. Adjust the adjustment screw so that the count is 10 – 13 just when the tonearm operation indicator first lights up.

Turning direction	Count of return-point
clockwise	large figure
counterclockwise	small figure

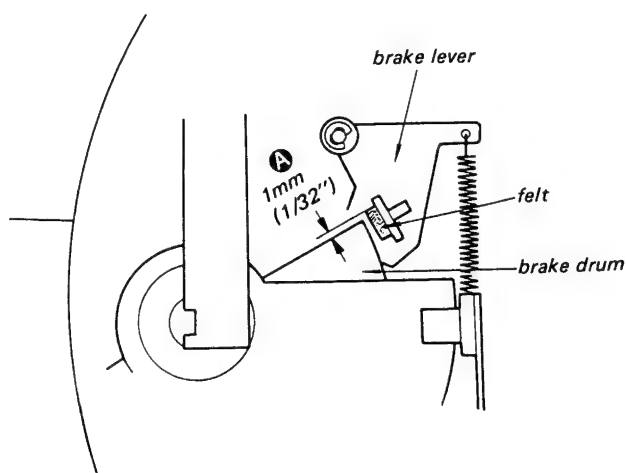

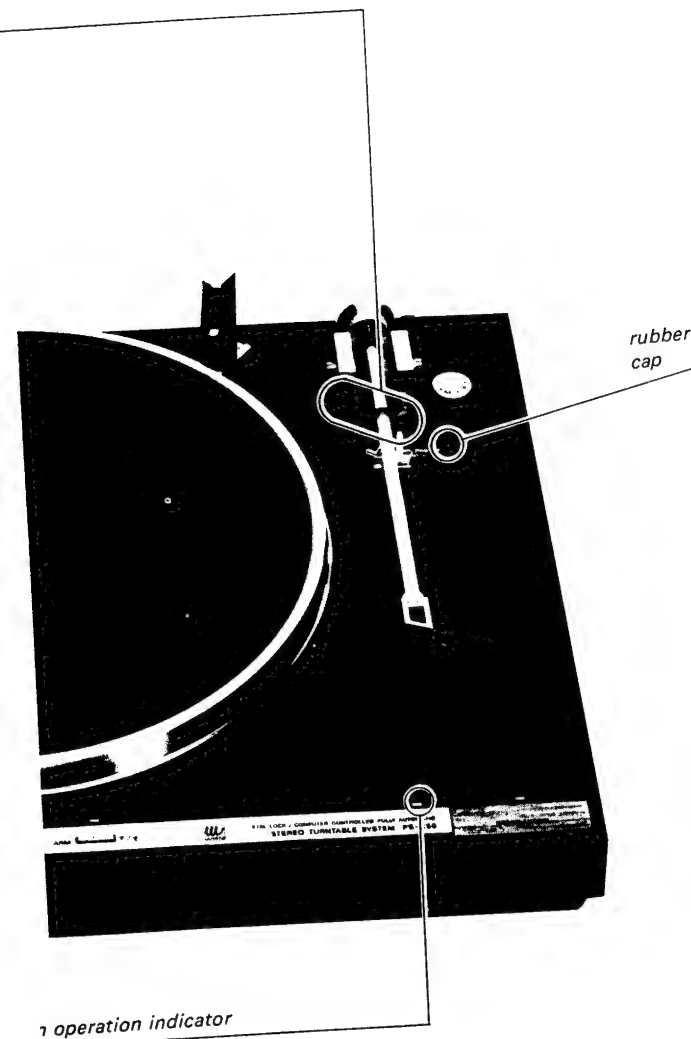

### Stylus Drop-point Adjustment

1. Remove the rubber cap.
2. Make sure that the stylus drops on the specified point of the test record.  
test record: YFSC-16

Record size	Count of drop-point
30 (12")	6 to 16
17 (7")	14 to 31

3. If necessary, insert the screwdriver into the hole and adjust the drop-point by turning the adjustment screw.


To change the drop-point inward:

Turn the adjustment screw slightly clockwise.  
(The figure of the drop-point will be large.)

To change the drop-point outward:

Turn the adjustment screw slightly counter-clockwise. (The figure of the drop-point will be small.)

**Note 1:** Confirm that the screw groove is positioned within the range shown below.

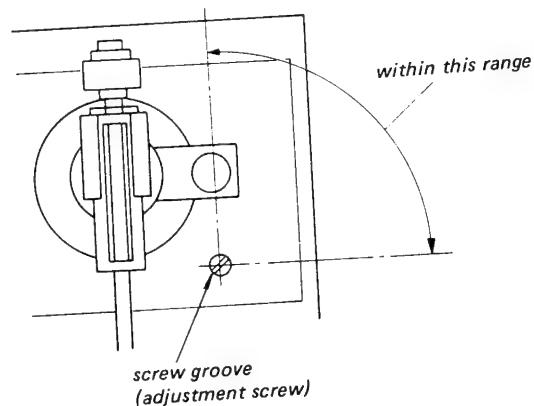

**Note 2:** Once it is properly adjusted with a 30 cm (12") record, the drop-point will be correct for 17 cm (7") records.

## Hall Device Gain/Motor Amp Offset Adjustment

### Setting:

POWER switch: ON



(Remove the turntable before turning the switch on.)

1. Disconnect the yellow lead wire and connect the regulated power supply as shown below.


Disconnect the yellow lead wire.

RED  
WHT  
BLU  
YEL  
BLK

regulated dc  
power supply  
(variable)  
1.5V dc

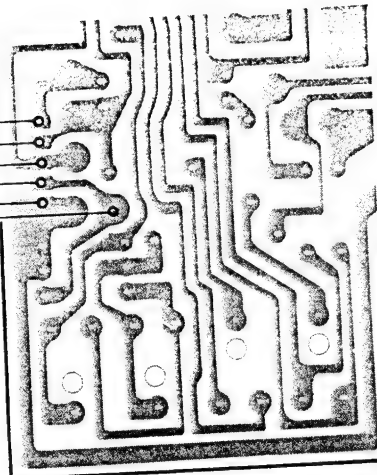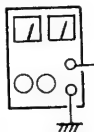

2. Connect oscilloscope to H1 and adjust RV301 for 5Vp-p reading on oscilloscope.
3. Connect oscilloscope to H2 and adjust RV302 for 5Vp-p reading on oscilloscope.
4. Connect VTVM or oscilloscope to H1 and adjust RV303 for 0V dc VTVM reading or for the waveform on oscilloscope as shown below.
5. Connect VTVM or oscilloscope to H2 and adjust RV304 for 0V dc VTVM reading or for the waveform on oscilloscope as shown below.

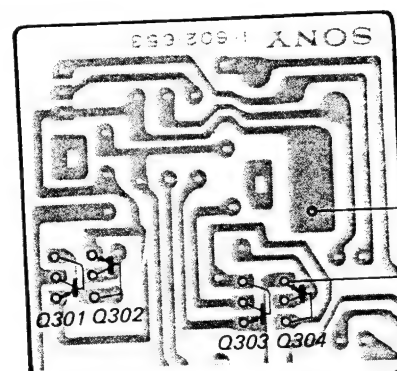


## Speed Detecting Head Output Level Adjustment

### Setting:


POWER switch: ON

1. Adjust the position of the head so that the VTVM reading is more than 25 mV ac at  $33\frac{1}{3}$  rpm.
2. Make sure that the head does not touch the turntable and tighten the screws securely.

**Note:** The clearance between the magnet coated rim and the speed-detecting head is more than 0.3 mm.

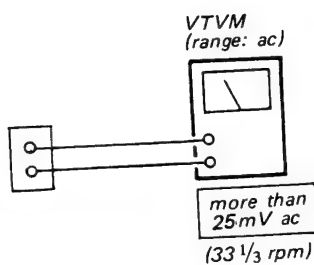

— Adjustment Location —

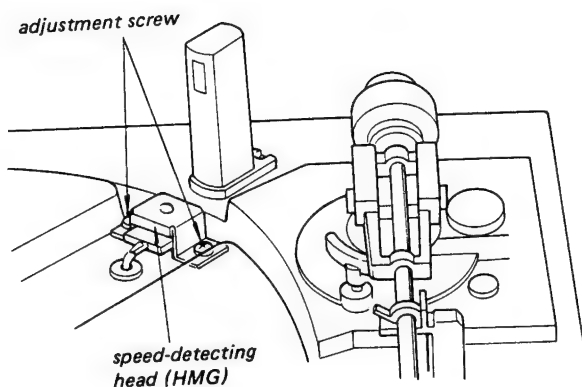

## Adjustment




ing the switch

and connect  
shown below.

2. Connect oscilloscope to H1 and adjust RV301 for 5Vp-p reading on oscilloscope.
3. Connect oscilloscope to H2 and adjust RV302 for 5Vp-p reading on oscilloscope.
4. Connect VTVM or oscilloscope to H1 and adjust RV303 for 0V dc VTVM reading or for the waveform on oscilloscope as shown below.
5. Connect VTVM or oscilloscope to H2 and adjust RV304 for 0V dc VTVM reading or for the waveform on oscilloscope as shown below.

Waveform on Oscilloscope:

Note: Set the sweep time longer for easy waveform checking.

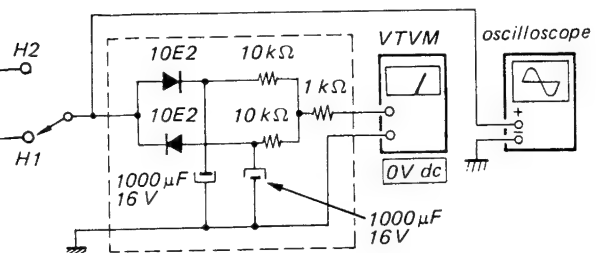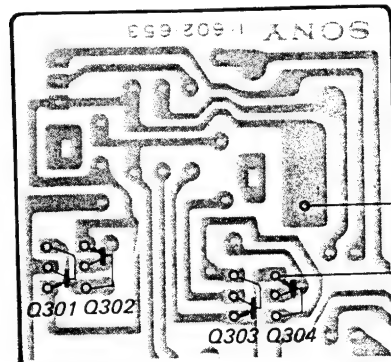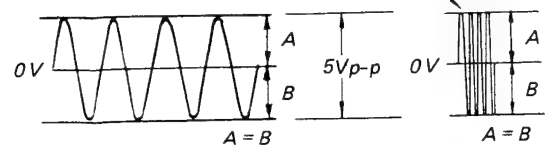

## Adjustment

at the VTVM  
3 rpm.


ach the turn-

coated rim and  
n 0.3 mm.

— Adjustment Location —



adjustment screw

speed-detecting  
head (HMG)

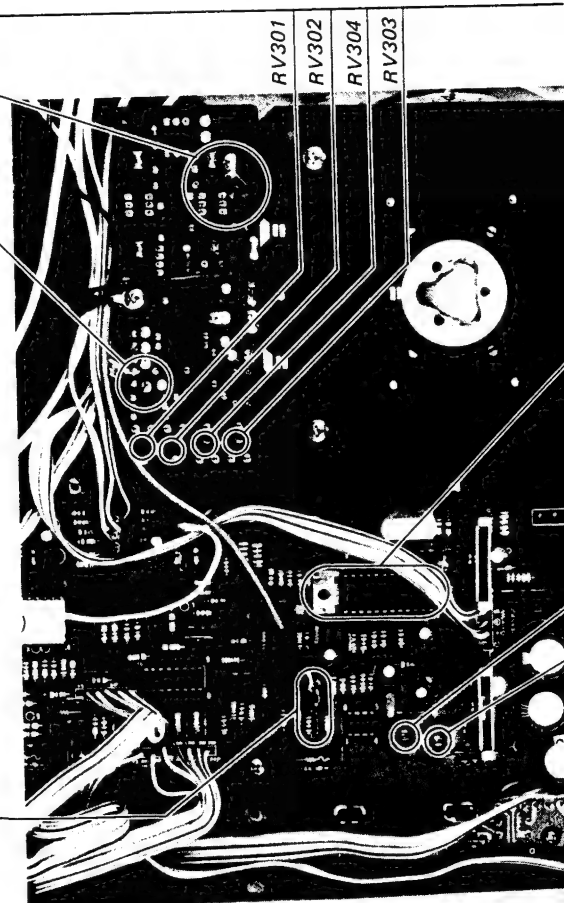

Waveform on Oscilloscope:

Note: Set the sweep time longer for easy waveform checking.

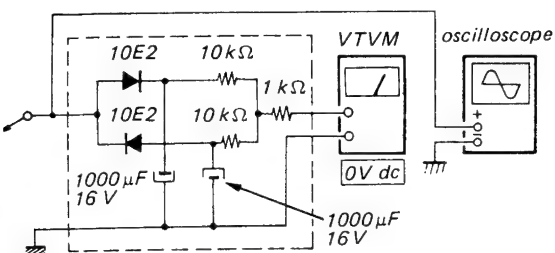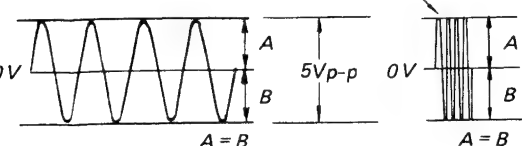


## Speed Adjustment

### Setting:


POWER switch: ON

1. Set the SPEED to 45 rpm.
2. Adjust RV202 for specified waveform as shown on the oscilloscope.

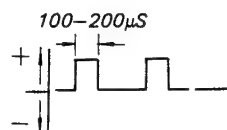


Note: The waveform should appear to positive side.

3. Set the SPEED to 33 rpm.
4. Adjust RV201 for specified waveform as shown on the oscilloscope.

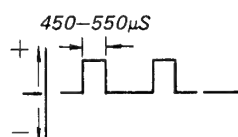

Note: The waveform should appear to positive side.

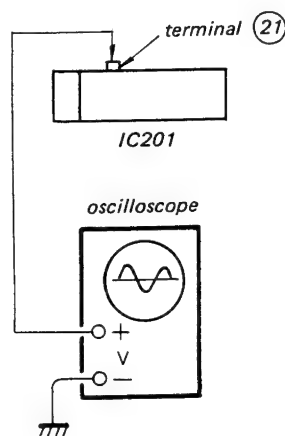

RV202

RV201



fied waveform as shown

e: The waveform should appear to positive side.


fied waveform as shown

te: The waveform should appear to positive side.


terminal (21)


IC201

illoscope

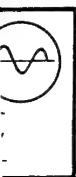

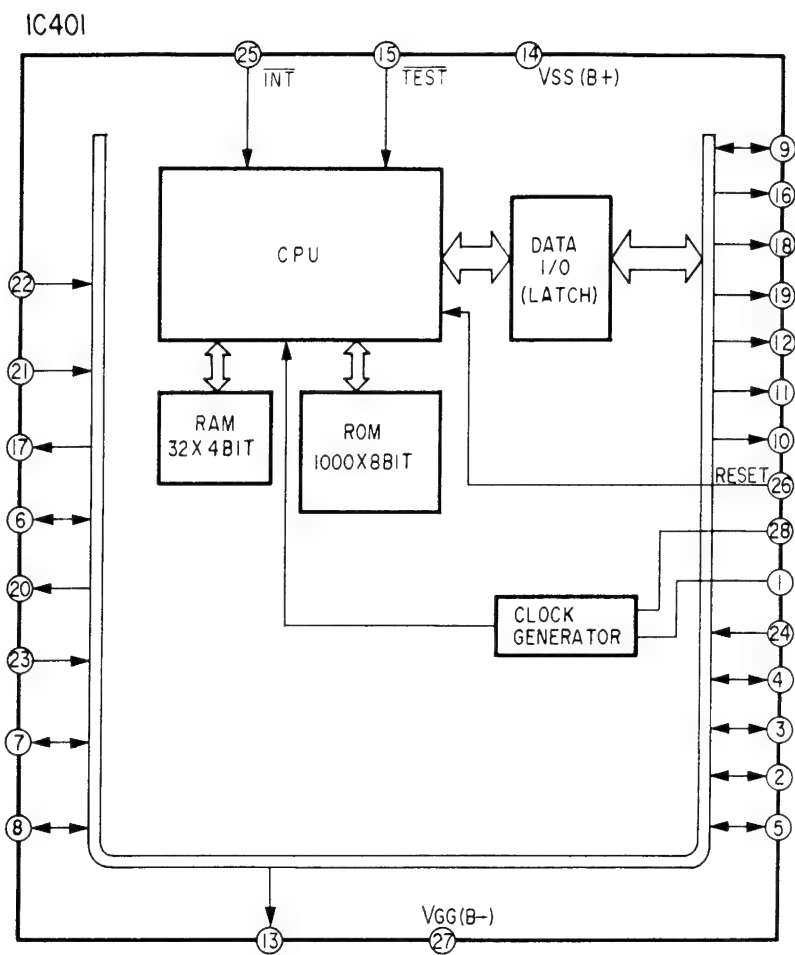



1

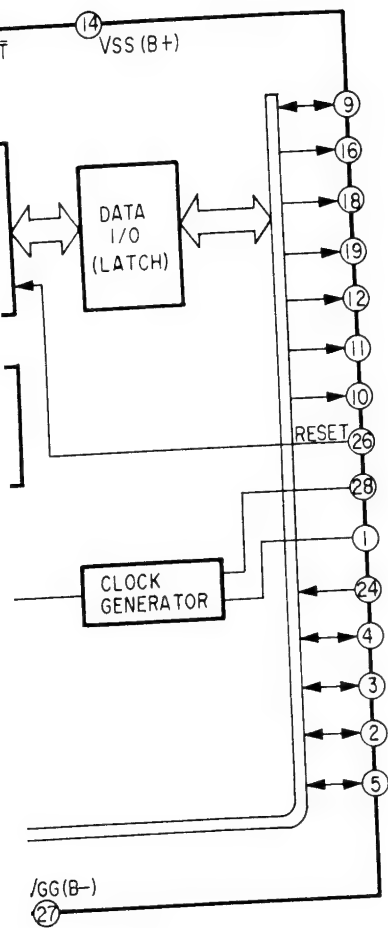



## SECTION 4 DIAGRAMS


### Note:


- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF} : \mu\text{F}$   
50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms,  $\frac{1}{4}\text{W}$  unless otherwise noted.  
 $\text{k}\Omega : 1000\Omega$ ,  $\text{M}\Omega : 1000\text{k}\Omega$
-  : fusible resistor.
-  : adjustment for repair.
-  : B+ bus.
-  : B- bus.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken with a VOM ( $20\text{k}\Omega/\text{V}$ ).  
no mark: When the POWER switch (S6) is "ON" and the tonearm is on the arm rest.
- Voltage variations may be noted due to normal production tolerances.
- Switch


Ref. No.	Switch	Position
S1	CAM SWITCH	OFF
S2	START/STOP	OFF
S3	SPEED	OFF
S4	ARM	OFF
S5	REPEAT	OFF
S6	POWER	OFF
S7	MUTING	STOP

- ※ : R438

US model: serial No. up to 801,000	10k $\Omega$
AEP model: serial No. up to 501,100	
UK model: serial No. up to 601,000	
US model: serial No. 801,001 and later	deleted
AEP model: serial No. 501,101 and later	
UK model: serial No. 601,001 and later	
Canadian model	
E model	


**Note:** The components identified by shading and mark  are critical for safety. Replace only with part number specified.

**Note:** Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

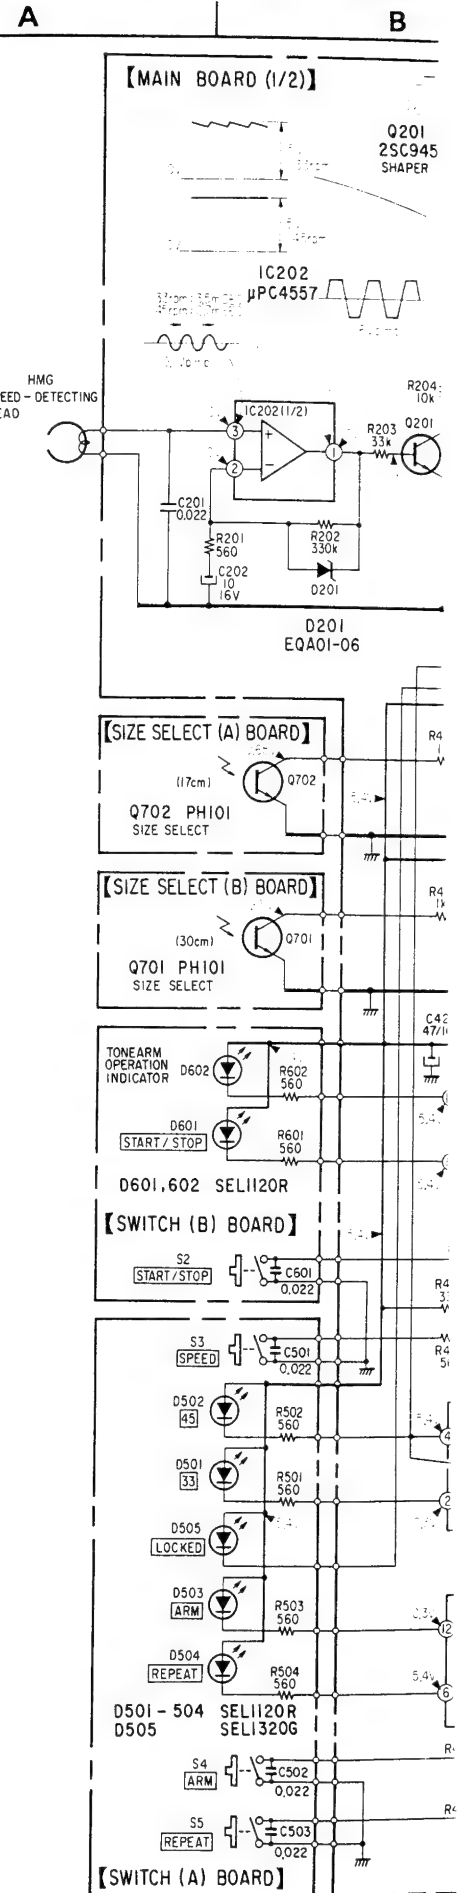


# 4-1. SCHEMATIC DIAGRAM



See page 13 for IC401 block diagram.

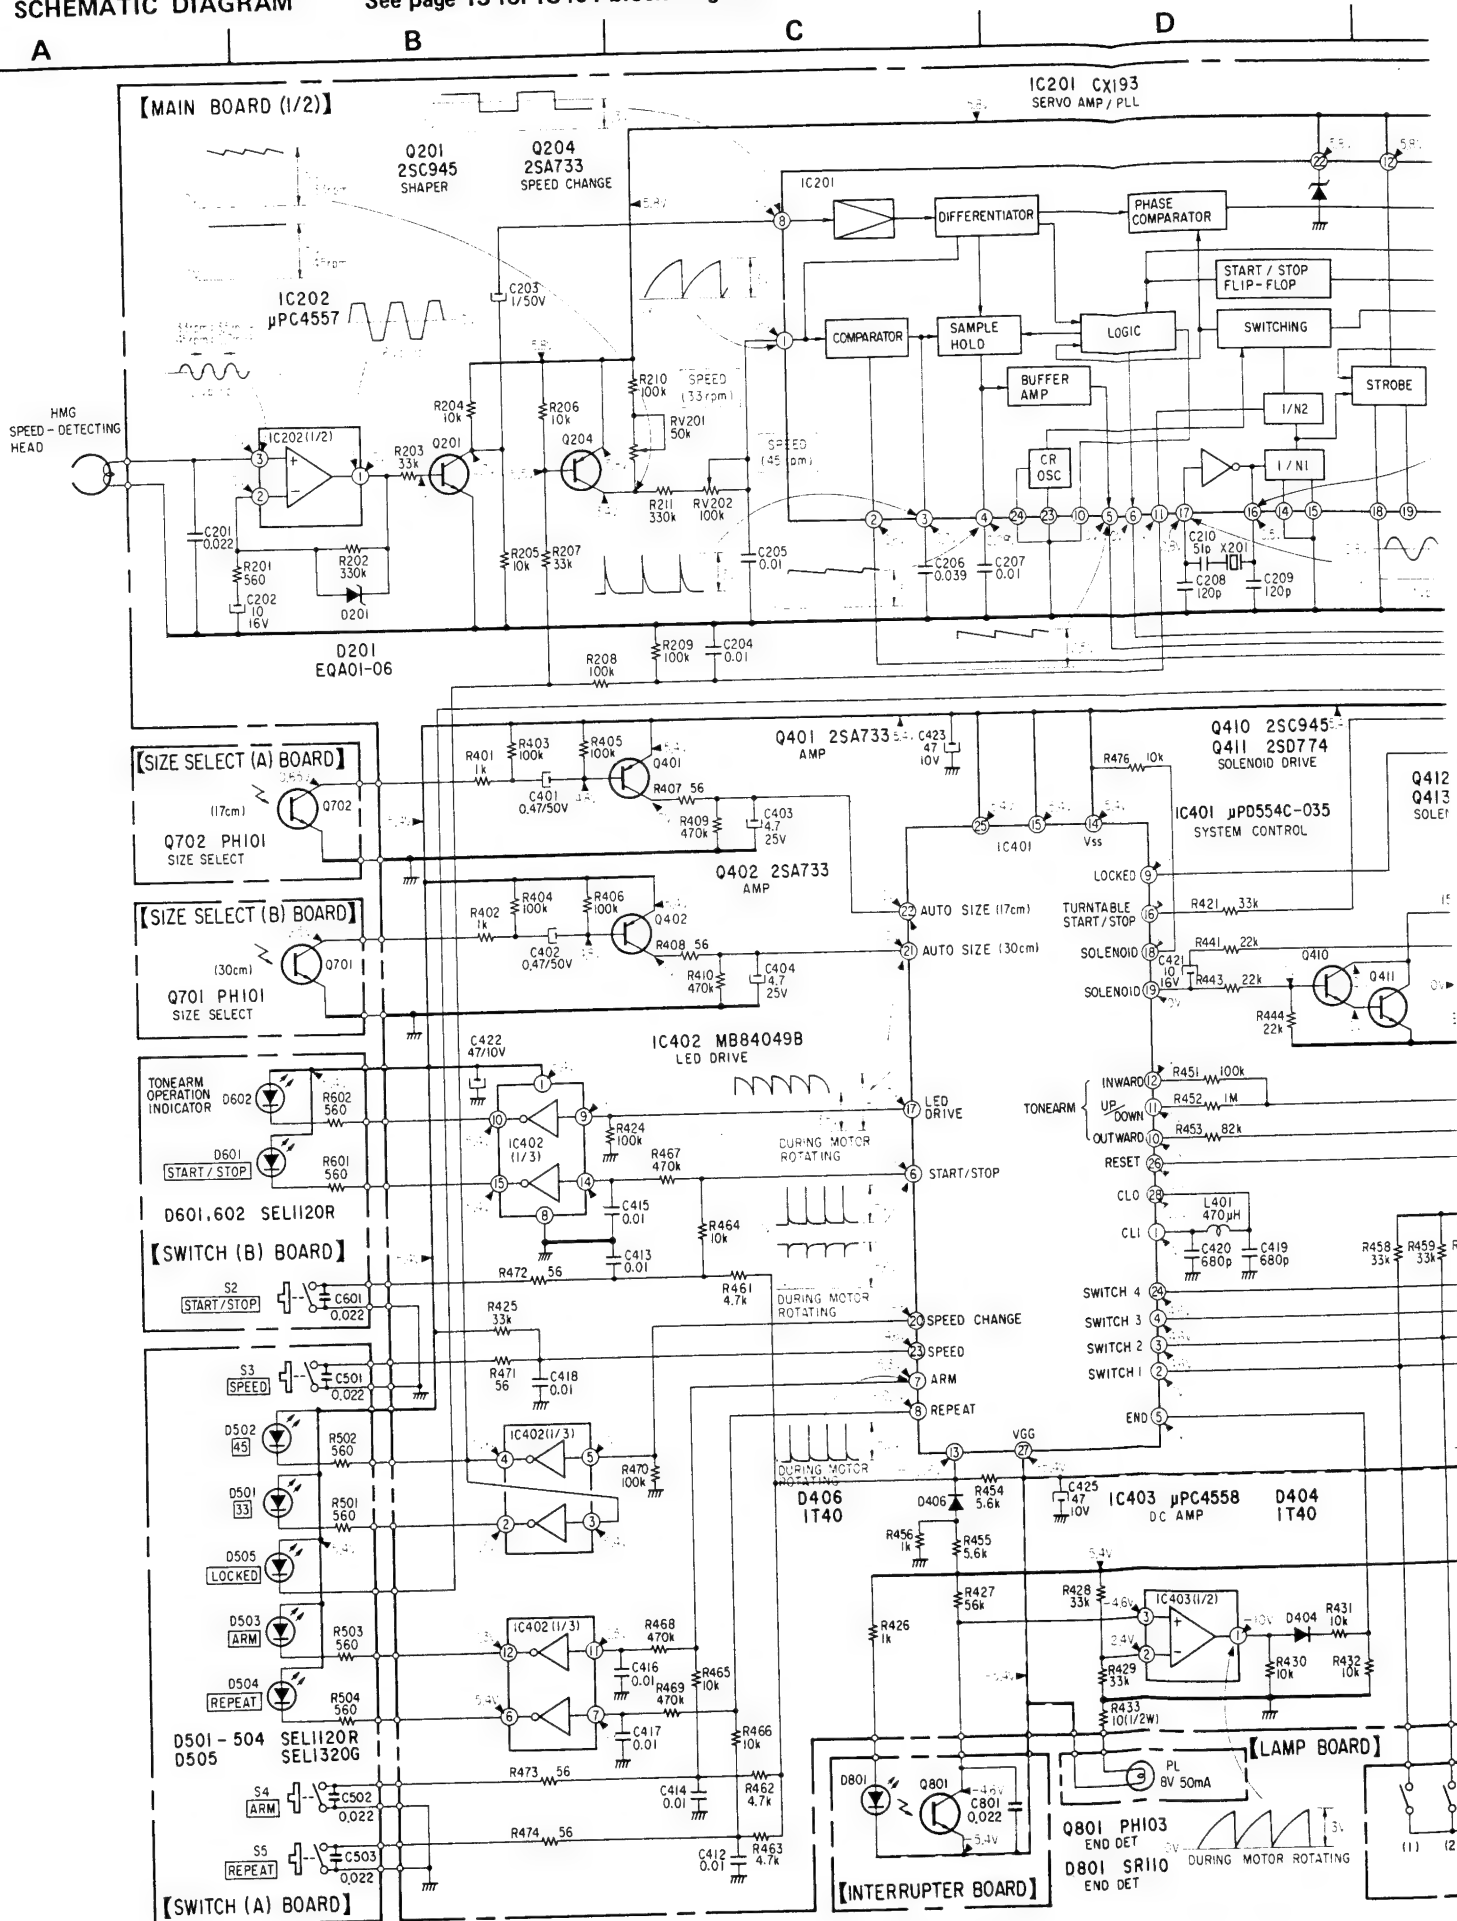
















# PS-X55 PS-X55

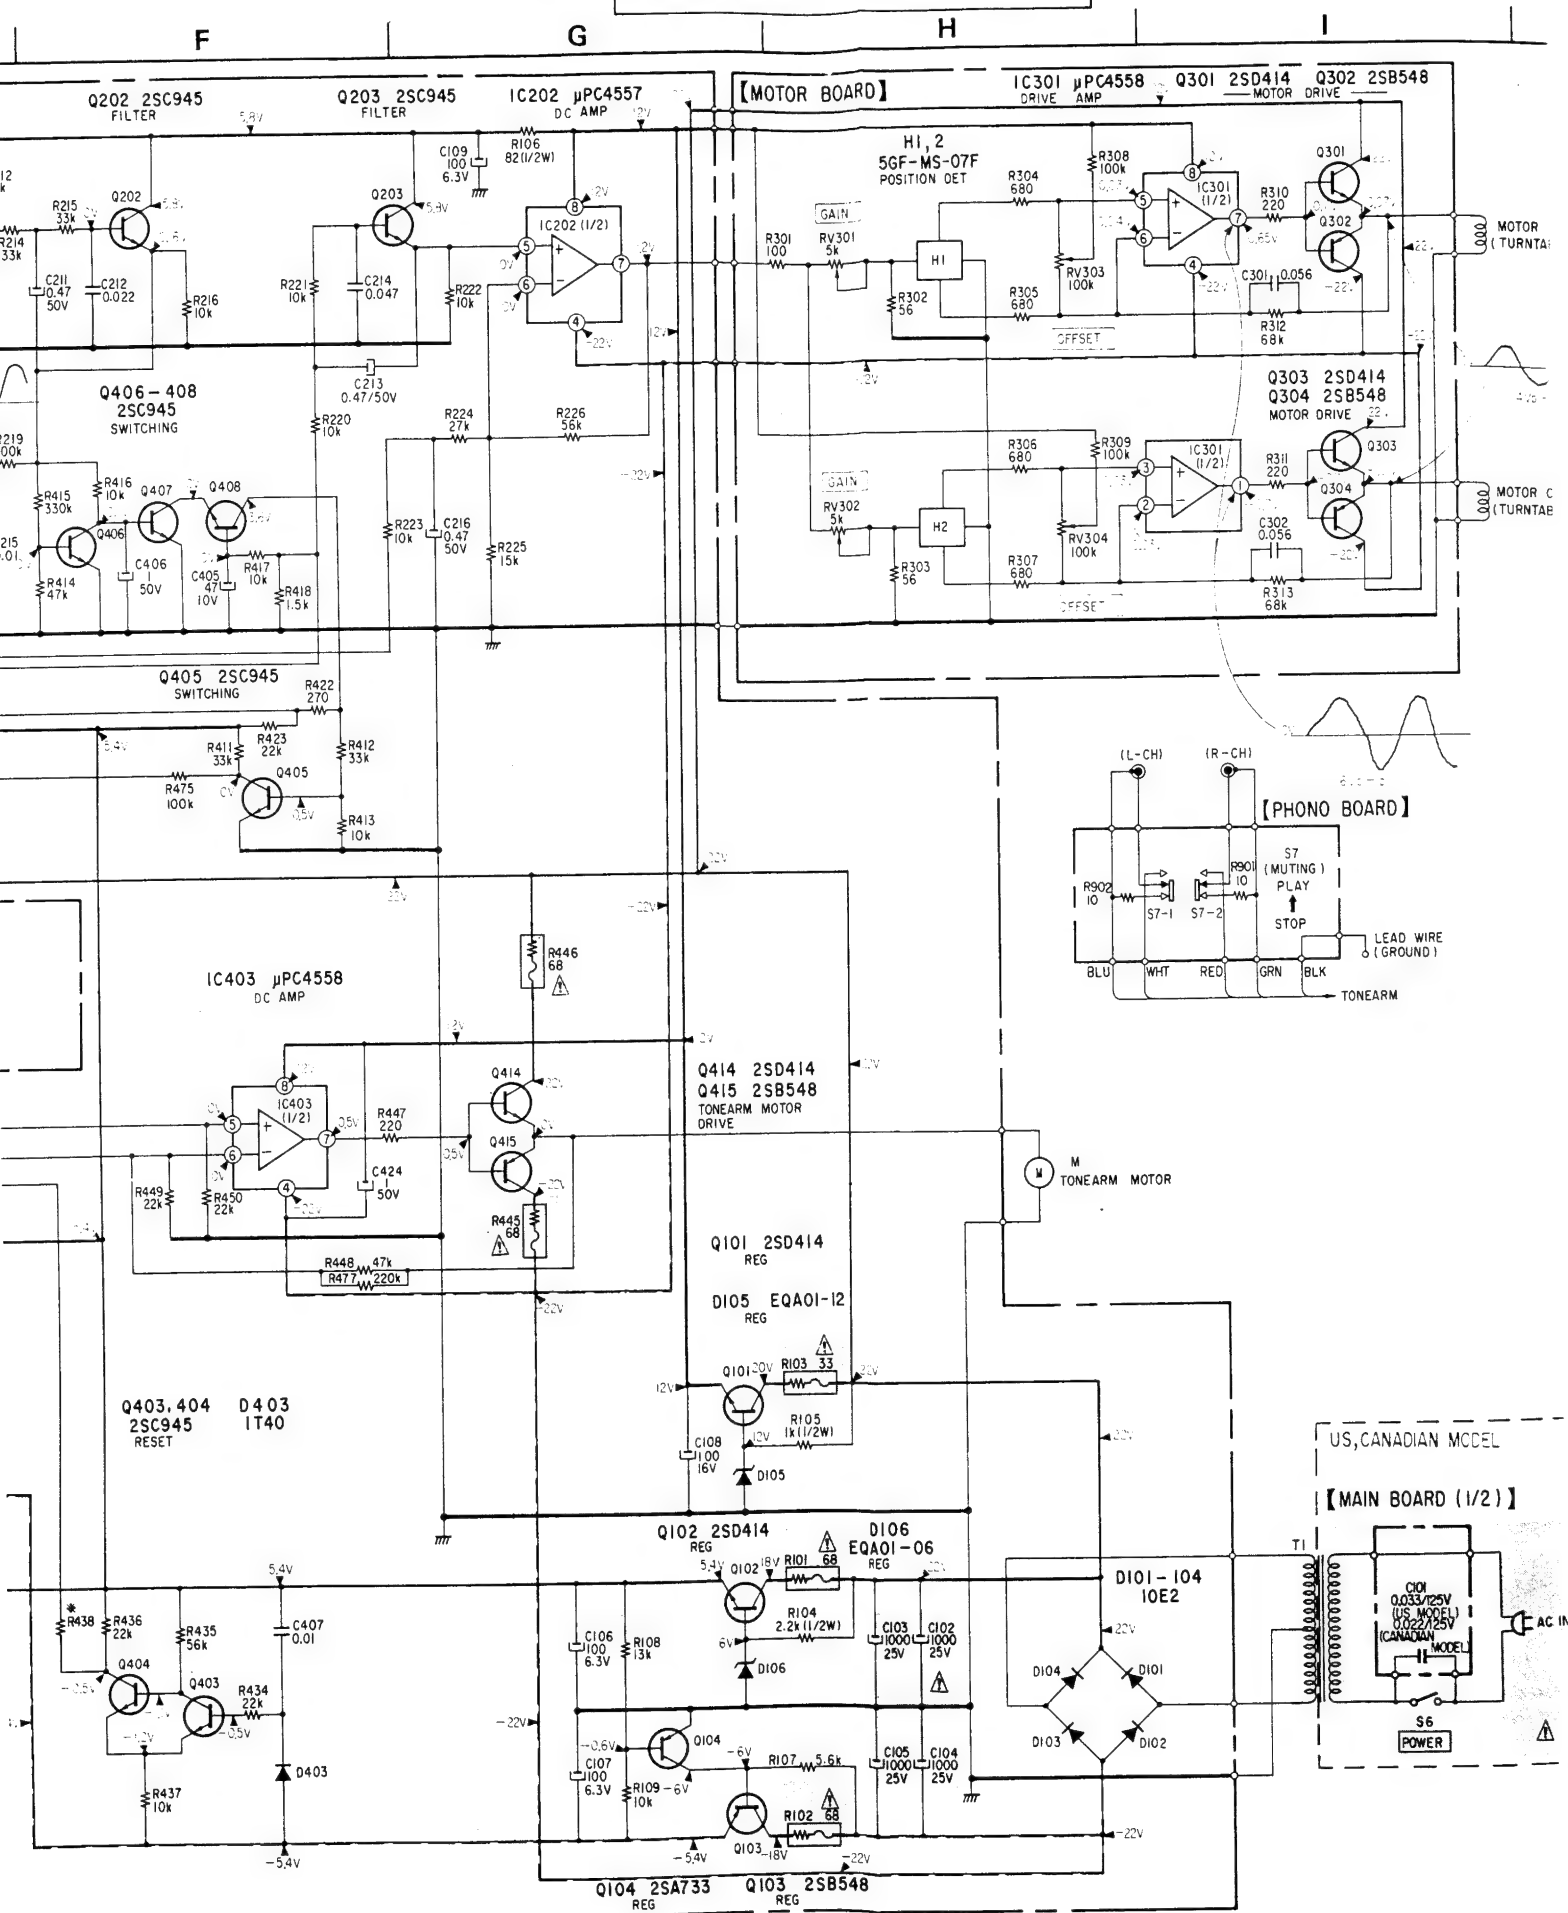

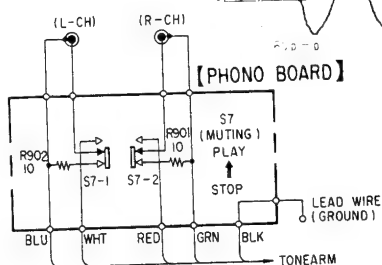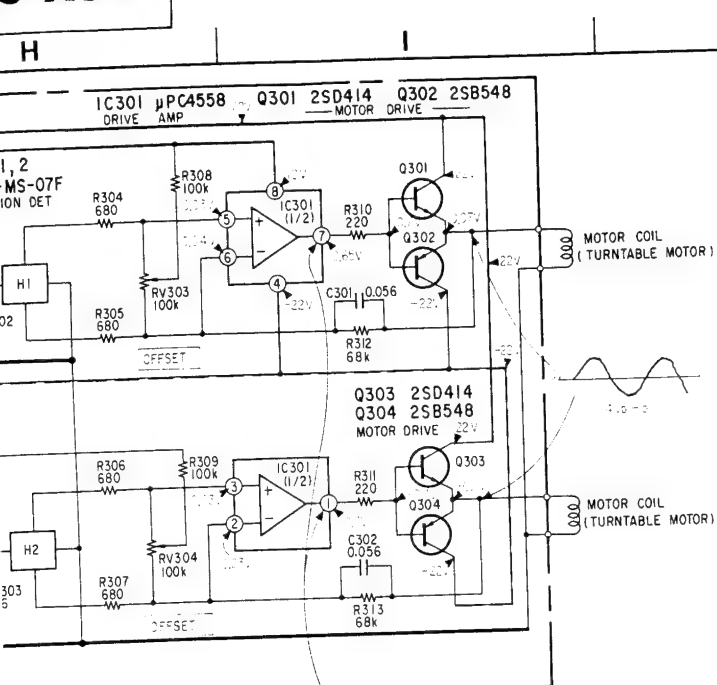

M  
TONEARM MOTOR

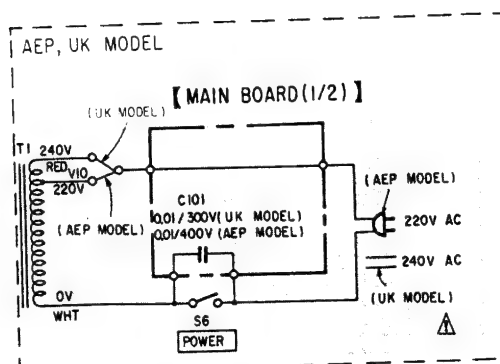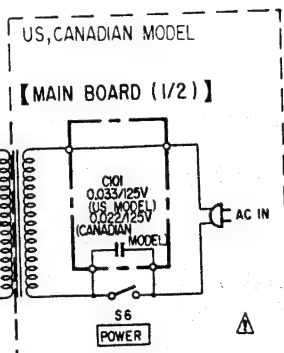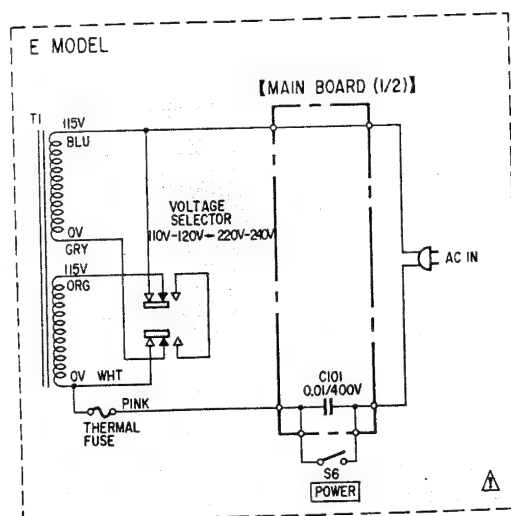

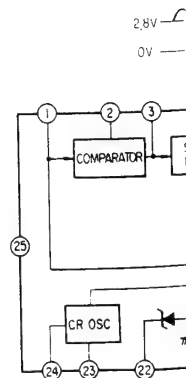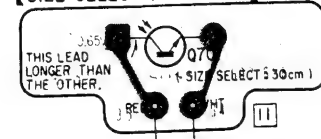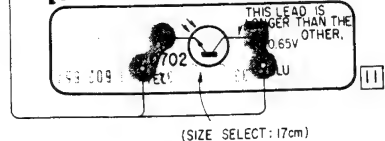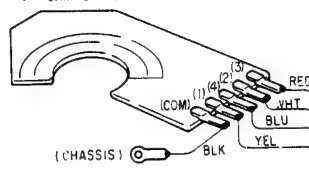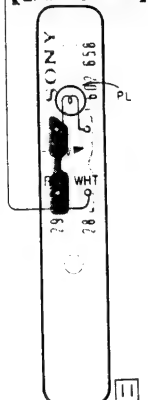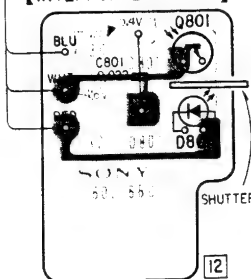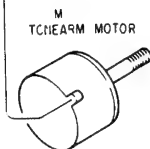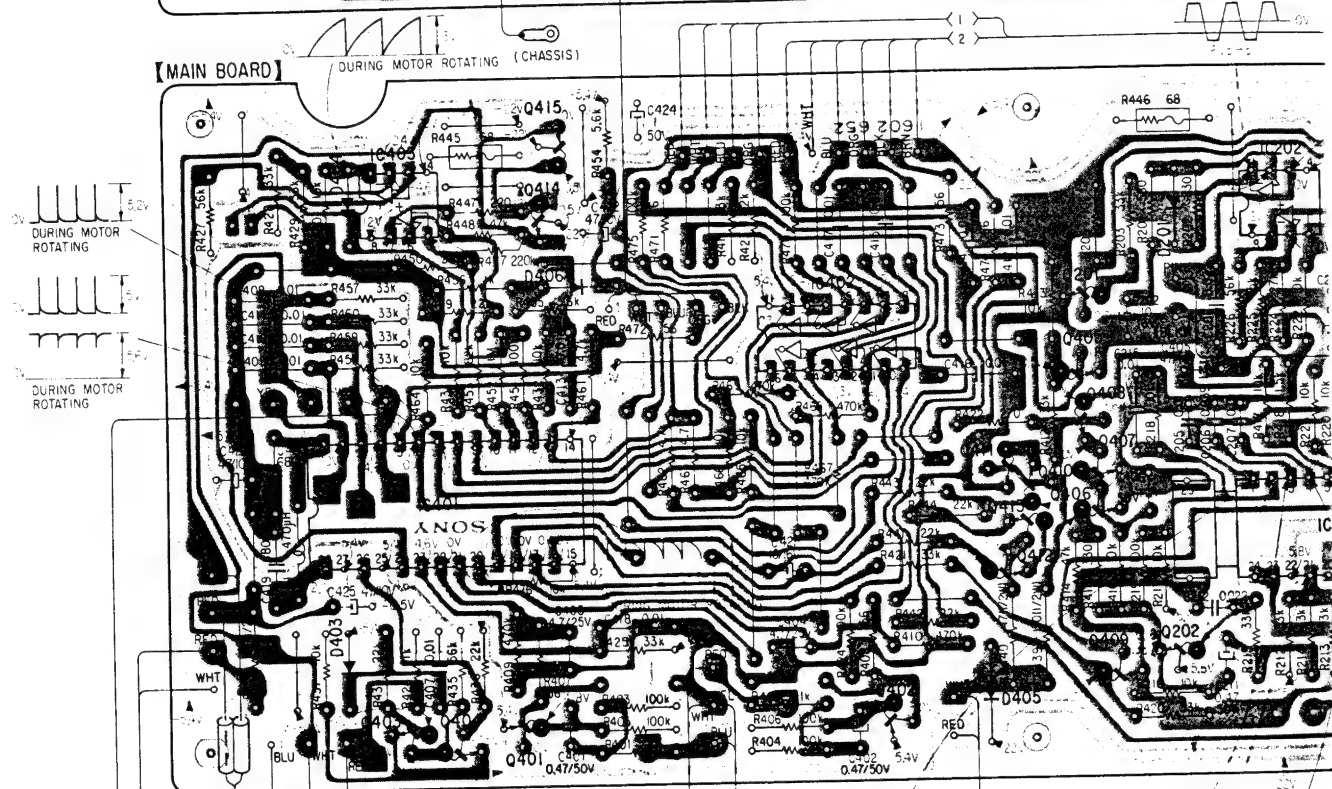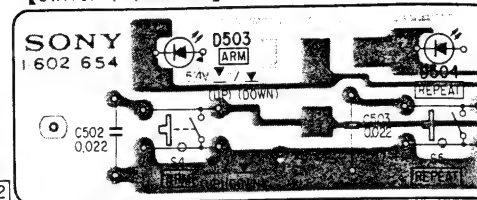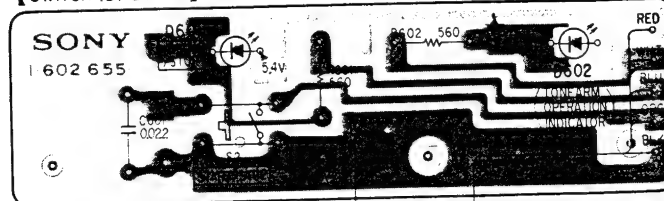1








# PS-X55 PS-X55



US model (Serial No. 801,001 and I.  
AEP model (Serial No. 501,101 and I.  
UK model (Serial No. 601,001 and I.  
Canadian model  
E model

D				E				F				G			
201	411	410	405	IC202	203	204	103	104	301	302	IC301	303	304		
412	413	406	409	IC201			102	101							
503			201	504				501	505	502					
405							106	105		104					
										103					
										102					
										101					


## TCH (A) BOARD

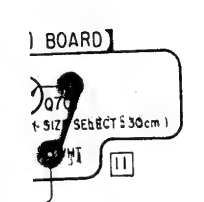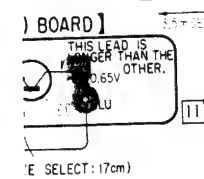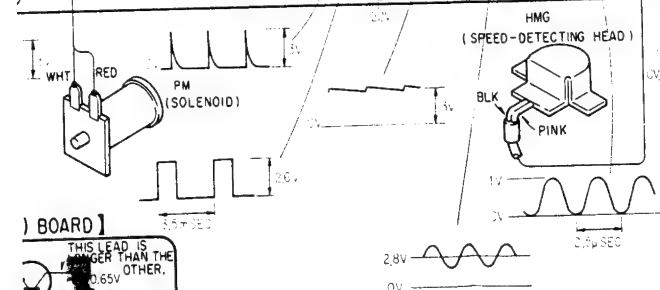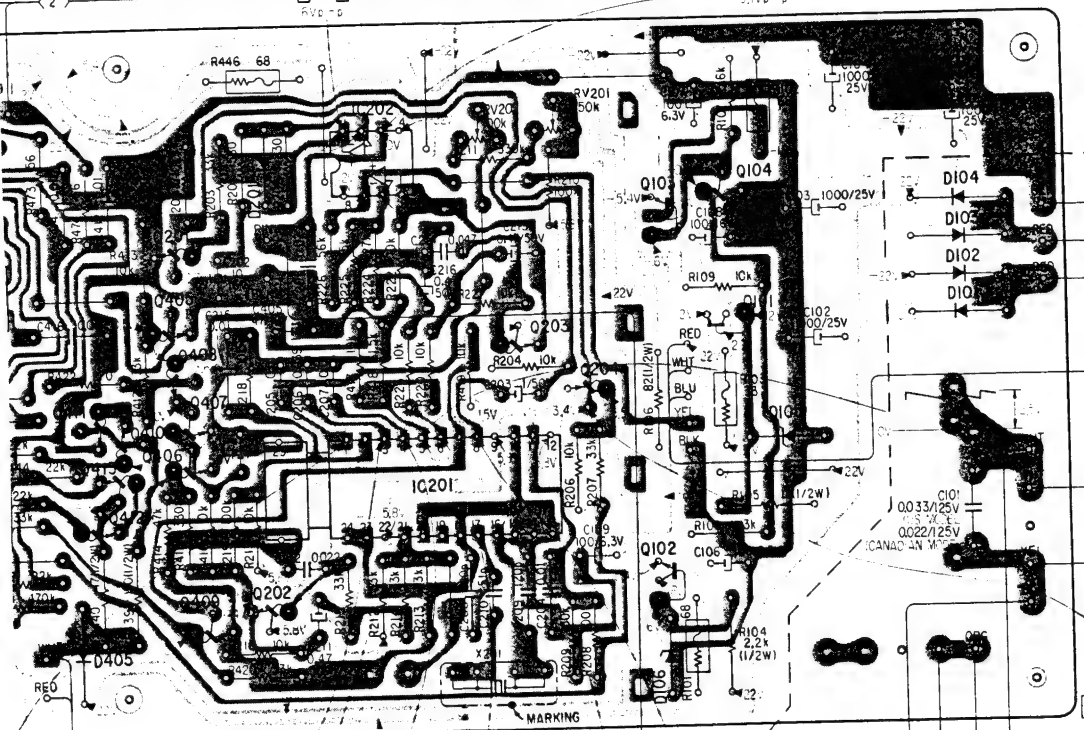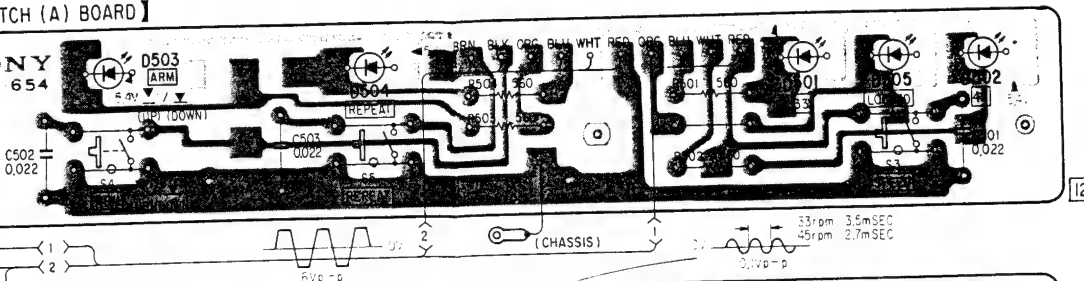

## [MOTOR BOARD]

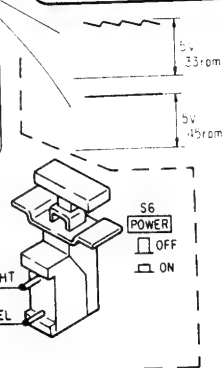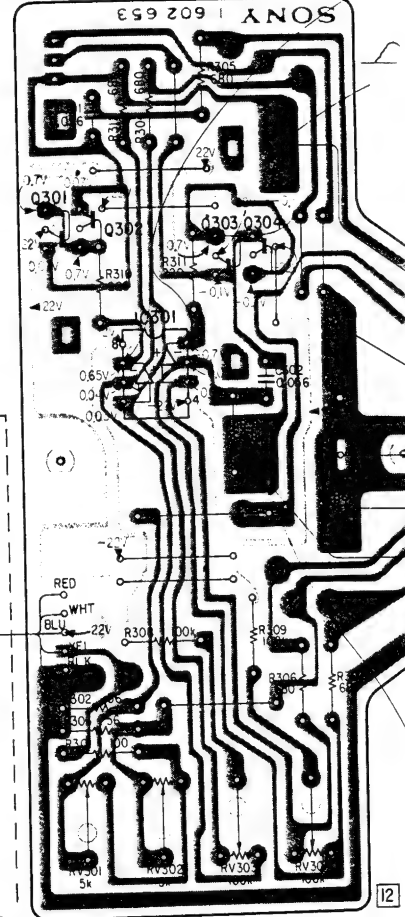


## [PHONO BOARD]

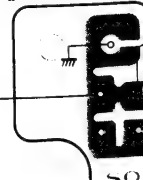

### Note:

- Color code of sleeving over the end of the jacket.

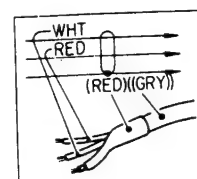

LEAD WIRE (GROUND)

- B+ pattern
- A- pattern

US model (Serial No. 801,001 and later)  
 AEP model (Serial No. 501,101 and later)  
 UK model (Serial No. 601,001 and later)  
 Canadian model  
 E model

F

G

H

I

301 302

IC301

303 304


Q  
IC

D


505

502


104  
103  
102  
101

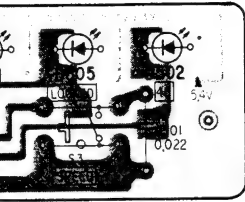


12

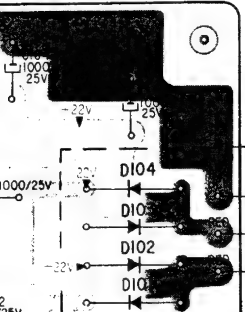

12

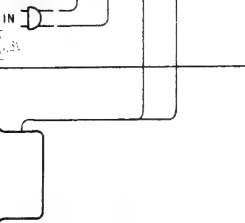


12

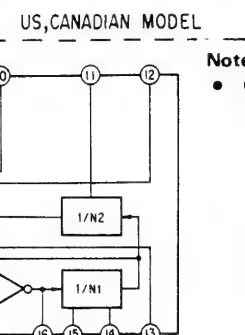


12


# 【MOTOR BOARD】

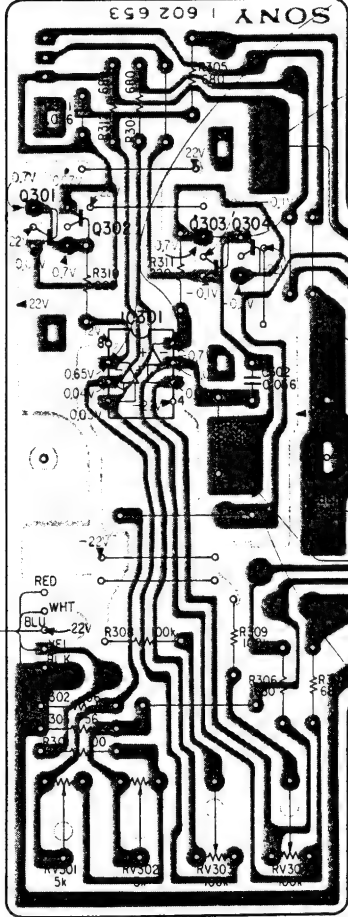


12

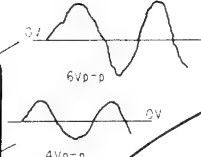


MOTOR COIL  
(TURNTABLE MOTOR)

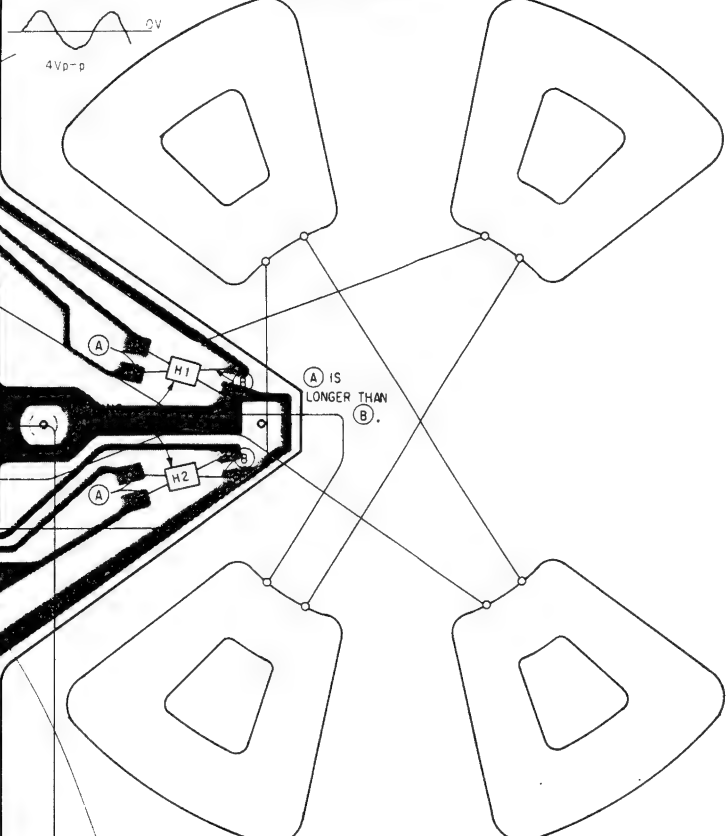

(A) IS LONGER THAN (B).

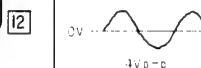

# 【PHONO BOARD】

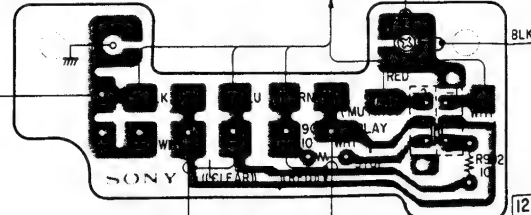


12

LEAD WIRE  
(GROUND)

• : B+ pattern

## Note:

- Color code of sleeving over the end of the jacket.

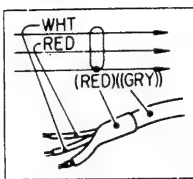

E MC

AC IN

A

(UK MODEL)  
240V AC  
(AEP MODEL)  
220V AC

START/STOP  
BUTTON  
(S2)

US model (Serial No. 801,001 and later)  
 AEP model (Serial No. 501,101 and later)  
 UK model (Serial No. 601,001 and later)  
 Canadian model  
 E model


**PS-X55**

Q  
C  
D



MOTOR COIL  
 (MOUNTABLE MOTOR)

1) IS  
 LONGER THAN  
 (B).

E MODEL

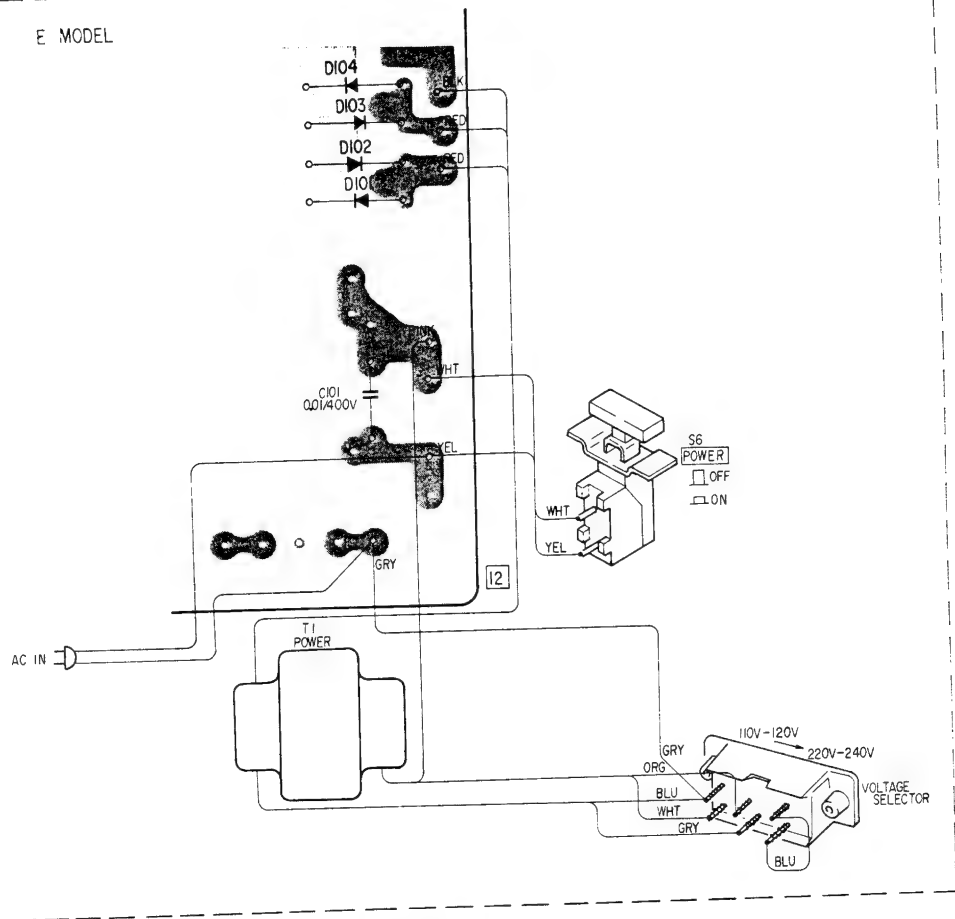

AEP, UK MODEL

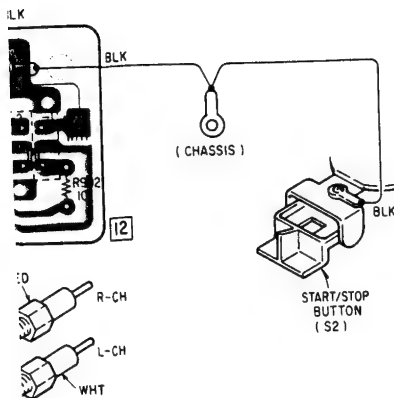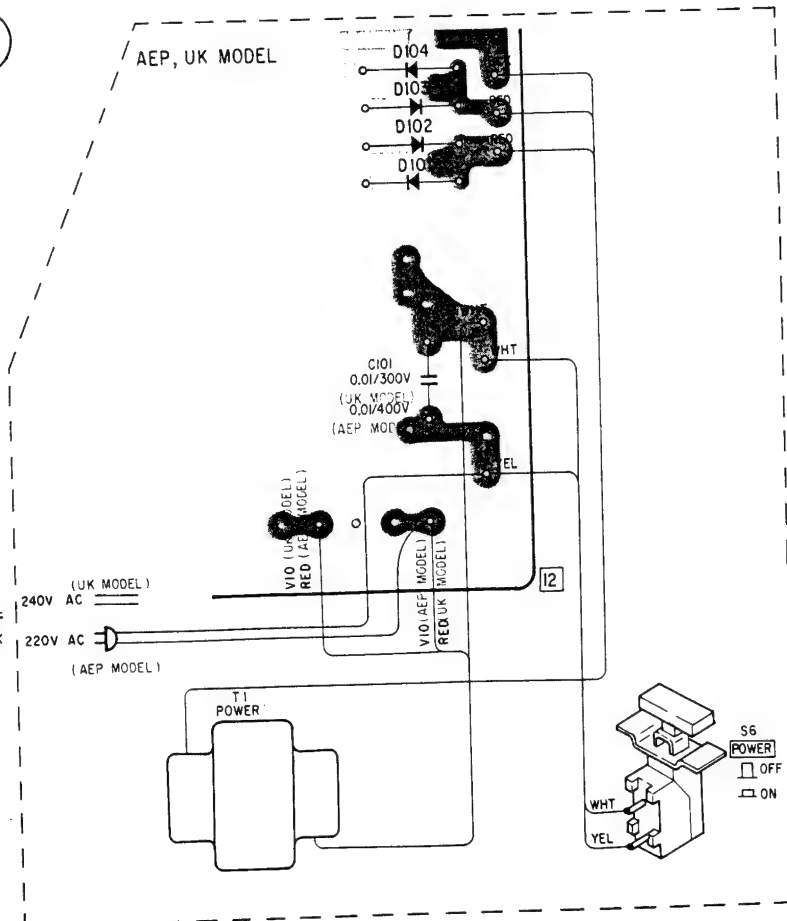




US model (Serial No. up to 801,000)  
 AEP model (Serial No. up to 501,100)  
 UK model (Serial No. up to 601,000)




P

D					E					F					G				
411	410	408	407	406	IC202	203	204	103	104	301	302				IC301	303	304		
412	413	409	202		IC201			102	101										
503	201	504								501	505	502							
05								106	105			104	103	102					
												101							

BOARD

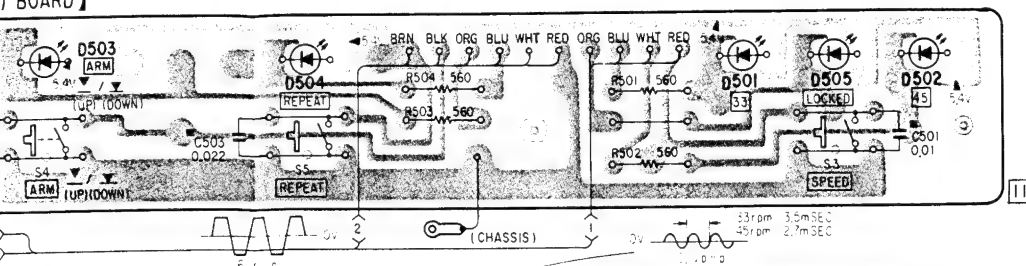


MOTOR BOARD

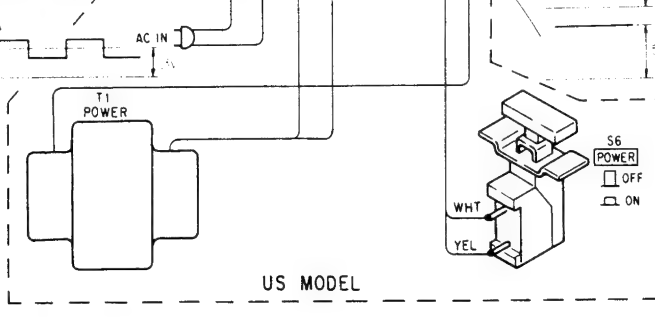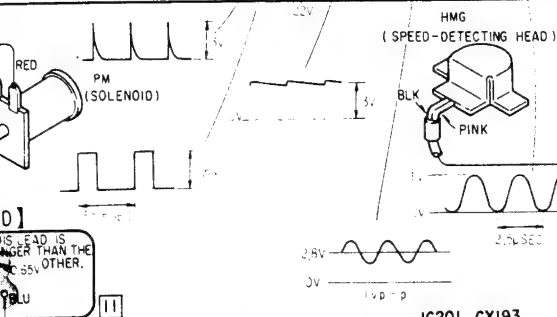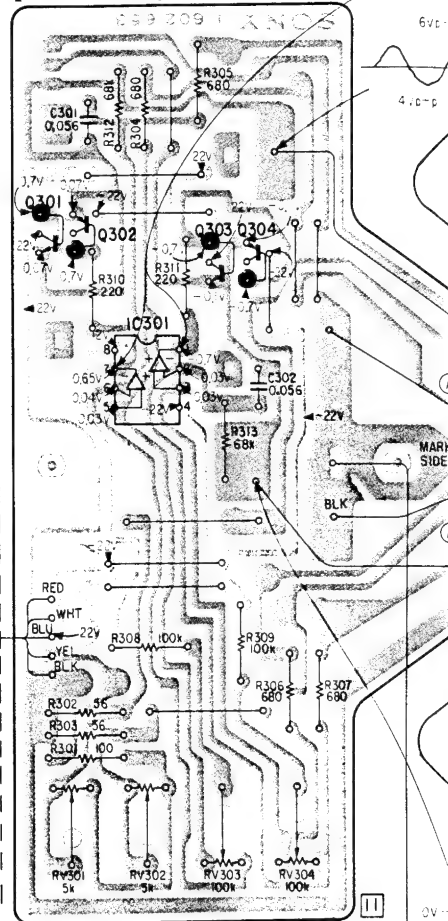


US MODEL

PHONO BOARD

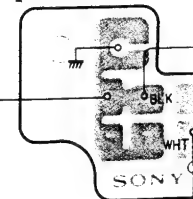

LEAD WIRE (GROUND)

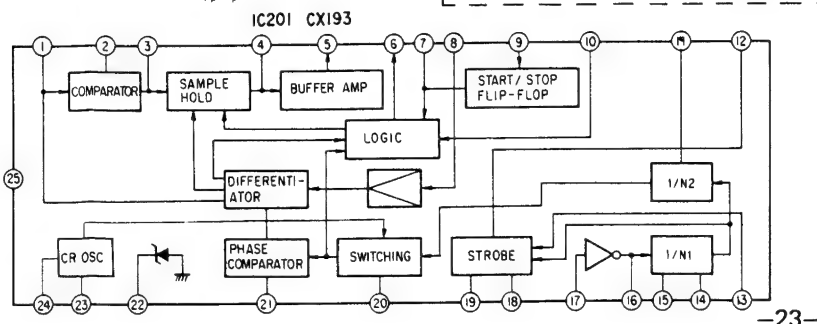



,000)  
,100)  
,000)

PS-X55

PS-X55

US model (Serial No. )  
AEP model (Serial No. )  
UK model (Serial No. )

G

H

I

J

301 302

IC301

303 304

Q


IC

D


【MOTOR BOARD】

SS9 209 1 ANOS

MOTOR COIL  
(TURNTABLE MOTOR)

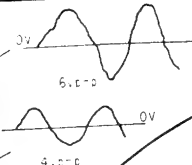

(A) IS LONGER THAN (B).

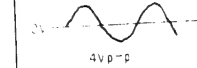

AEP, UK MODEL

【PHONO BOARD】

TONEARM

BLK

BLK

(CHASSIS)

(UK MODEL)

240V AC

220V AC

(AEP MODEL)

START/STOP  
BUTTON  
(S2)

T1  
POWER

LEAD WIRE  
(GROUND)

RED

R-CH

L-CH

WHT

VIO (UK MODEL)  
RED (AEP MODEL)

US model (Serial No. up to 801,000)  
AEP model (Serial No. up to 501,100)  
UK model (Serial No. up to 601,000)

I

J

K


L

MOTOR COIL  
(ABLE MOTOR)



IS  
GER THAN  
(B)

Note:

- Color code of sleeving over the end of the jacket.

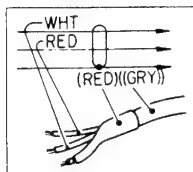

- B+ pattern

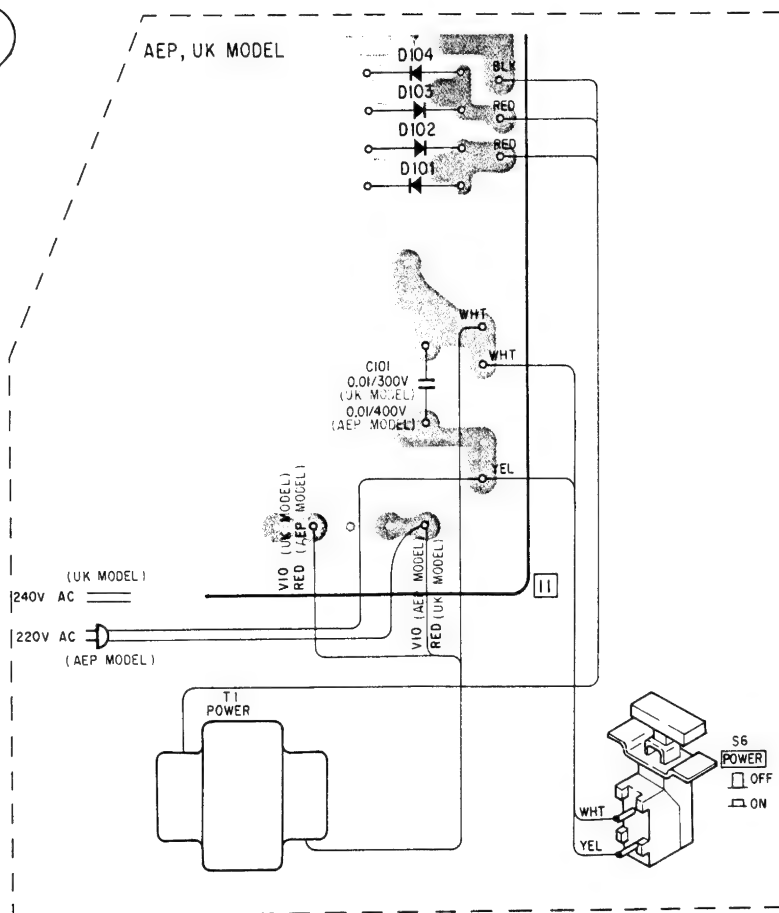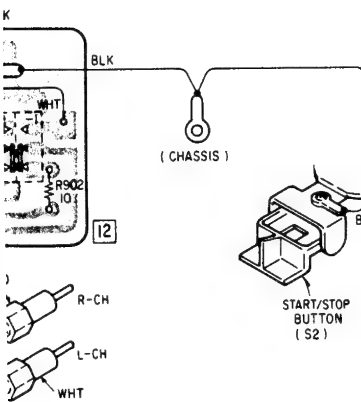

1

2

3


4

5


# Replacement Semiconductors

For replacement, use semiconductors except in ( ).

2SD414

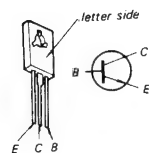


2SB548

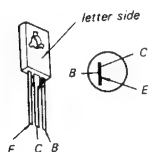


2SA1027R

(2SA733)

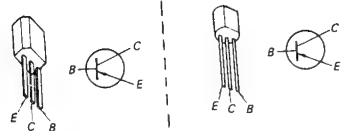


2SC1364


(2SC945)

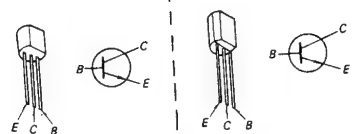


2SC1475 (2SD774)

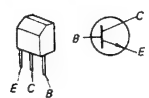


PH101

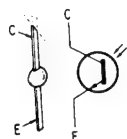

PH103

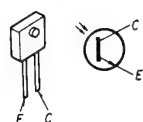


CX193

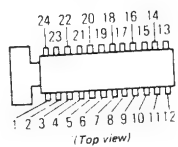


μPC4557C


μPC4558C

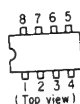

μPD554C035

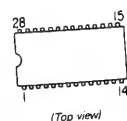


μPD4049C (MB84049B)

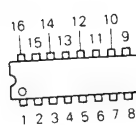


10E2

1S1555 (1T40)

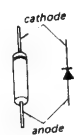


EQB01-12Z (EQA01-12)

EQB01-06 (EQA01-06)

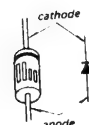


SEL1320G

SEL1120R

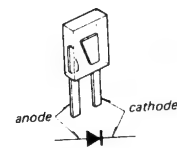

SR110

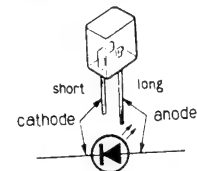

5GF-MS-07F





SECTION 5  
EXPLODED VIEWS

A

B

C


D

(1)


## Note:


- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head

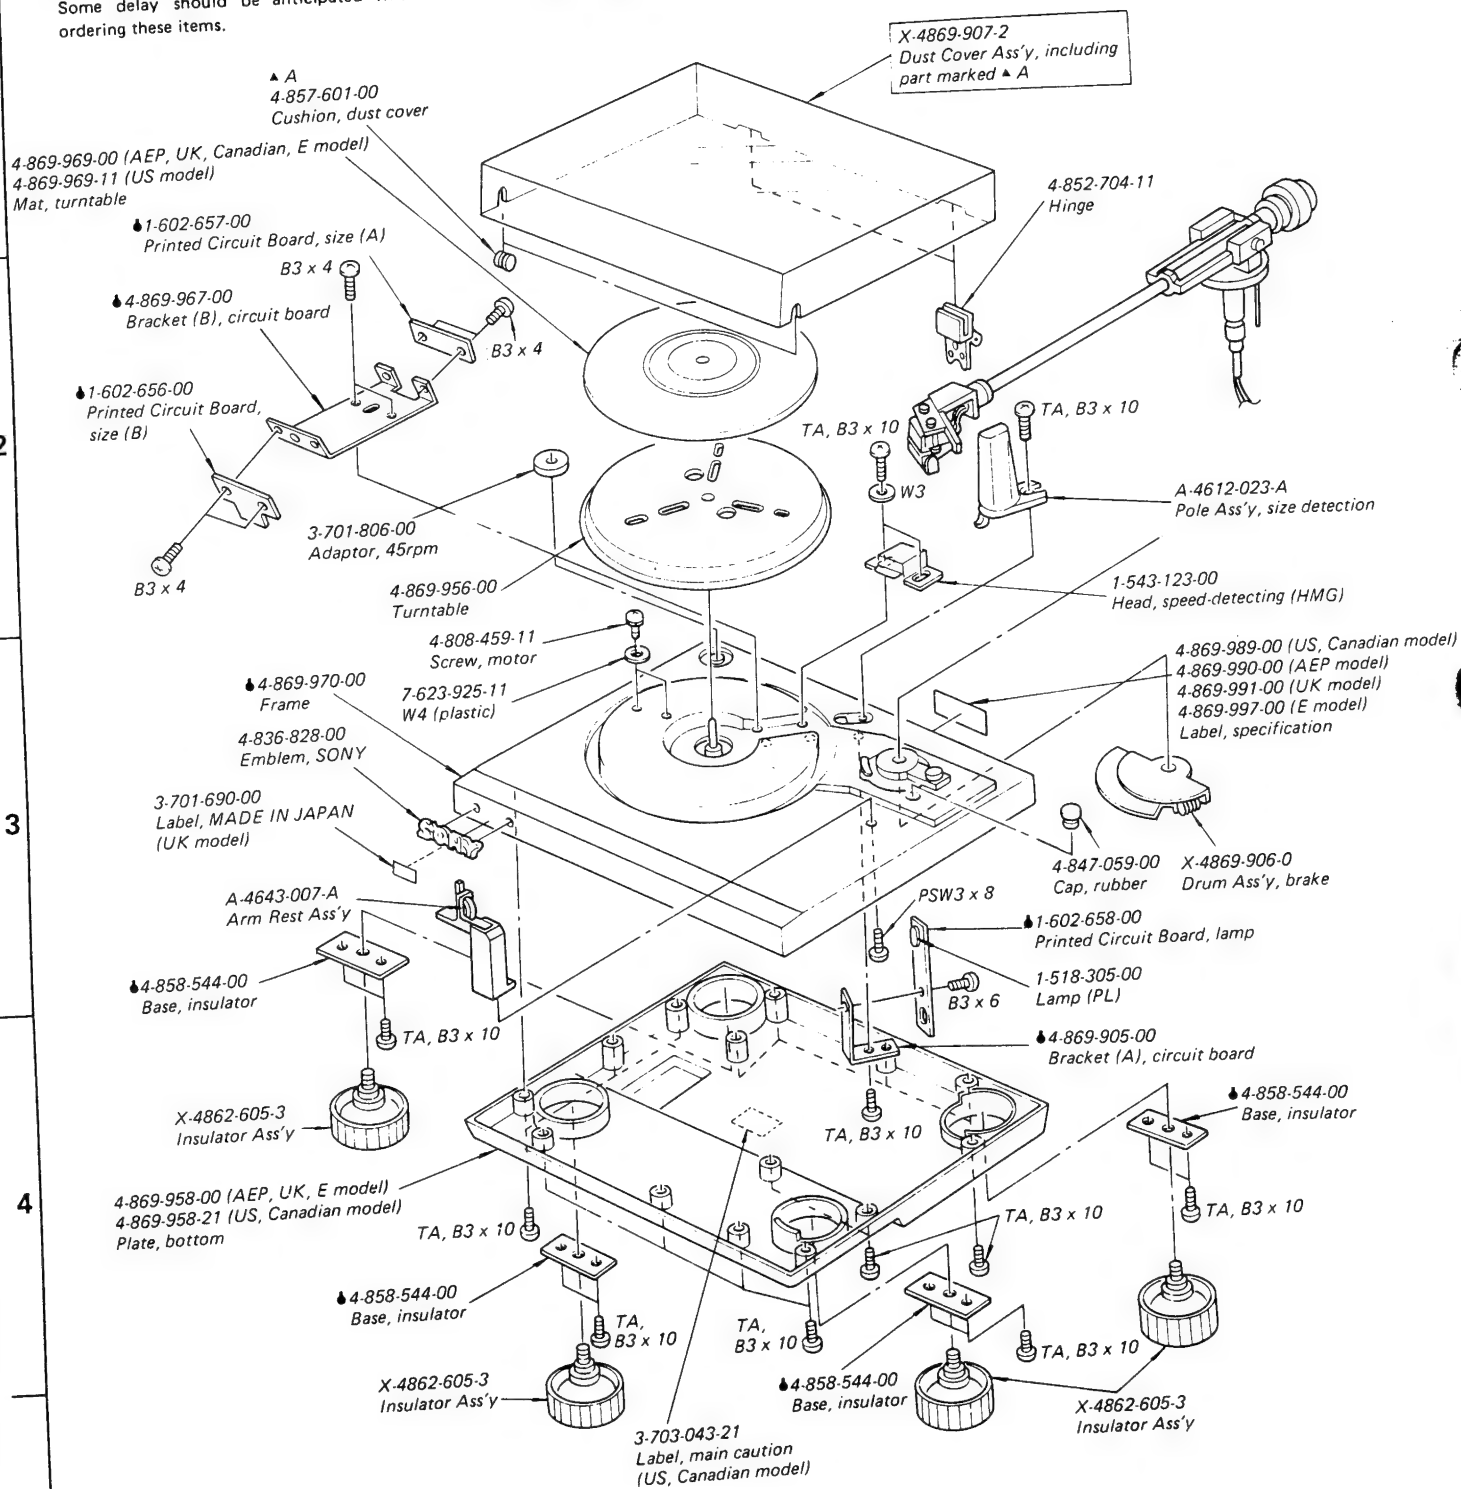


(2)

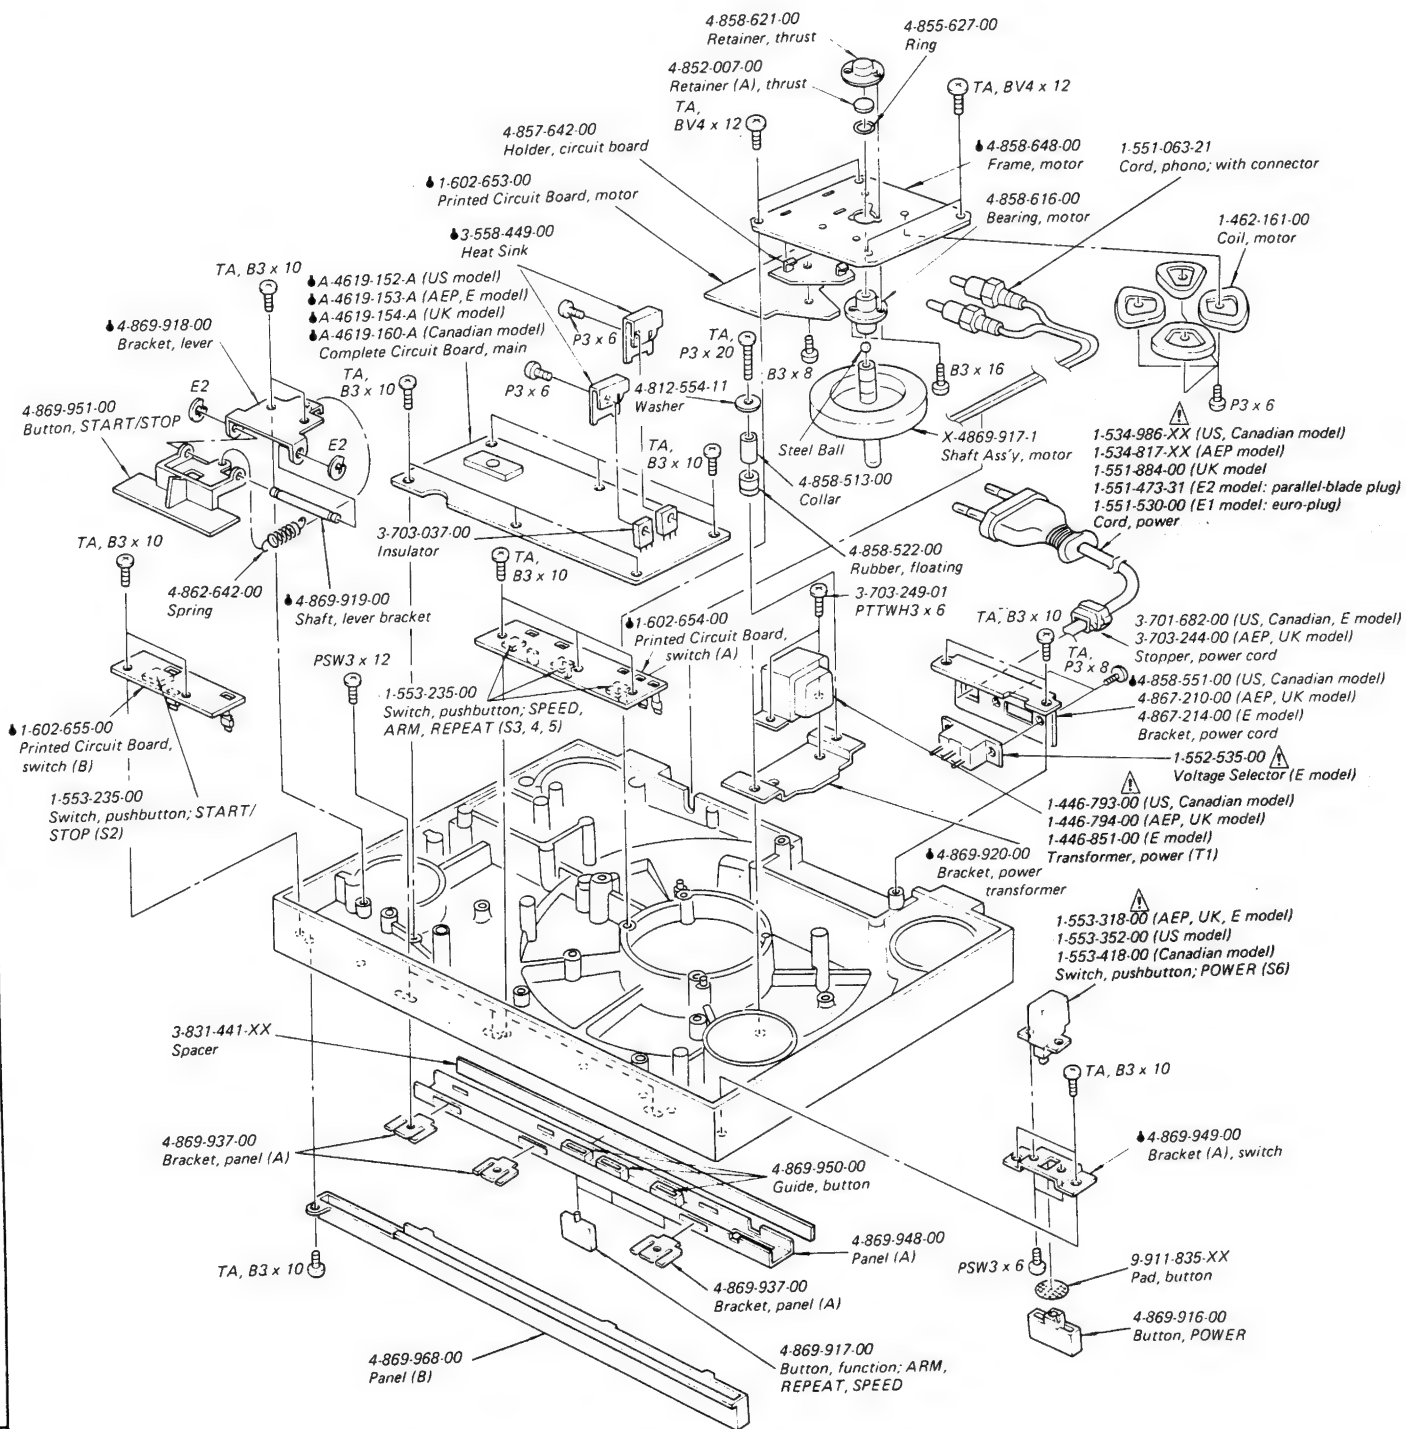


Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(3)

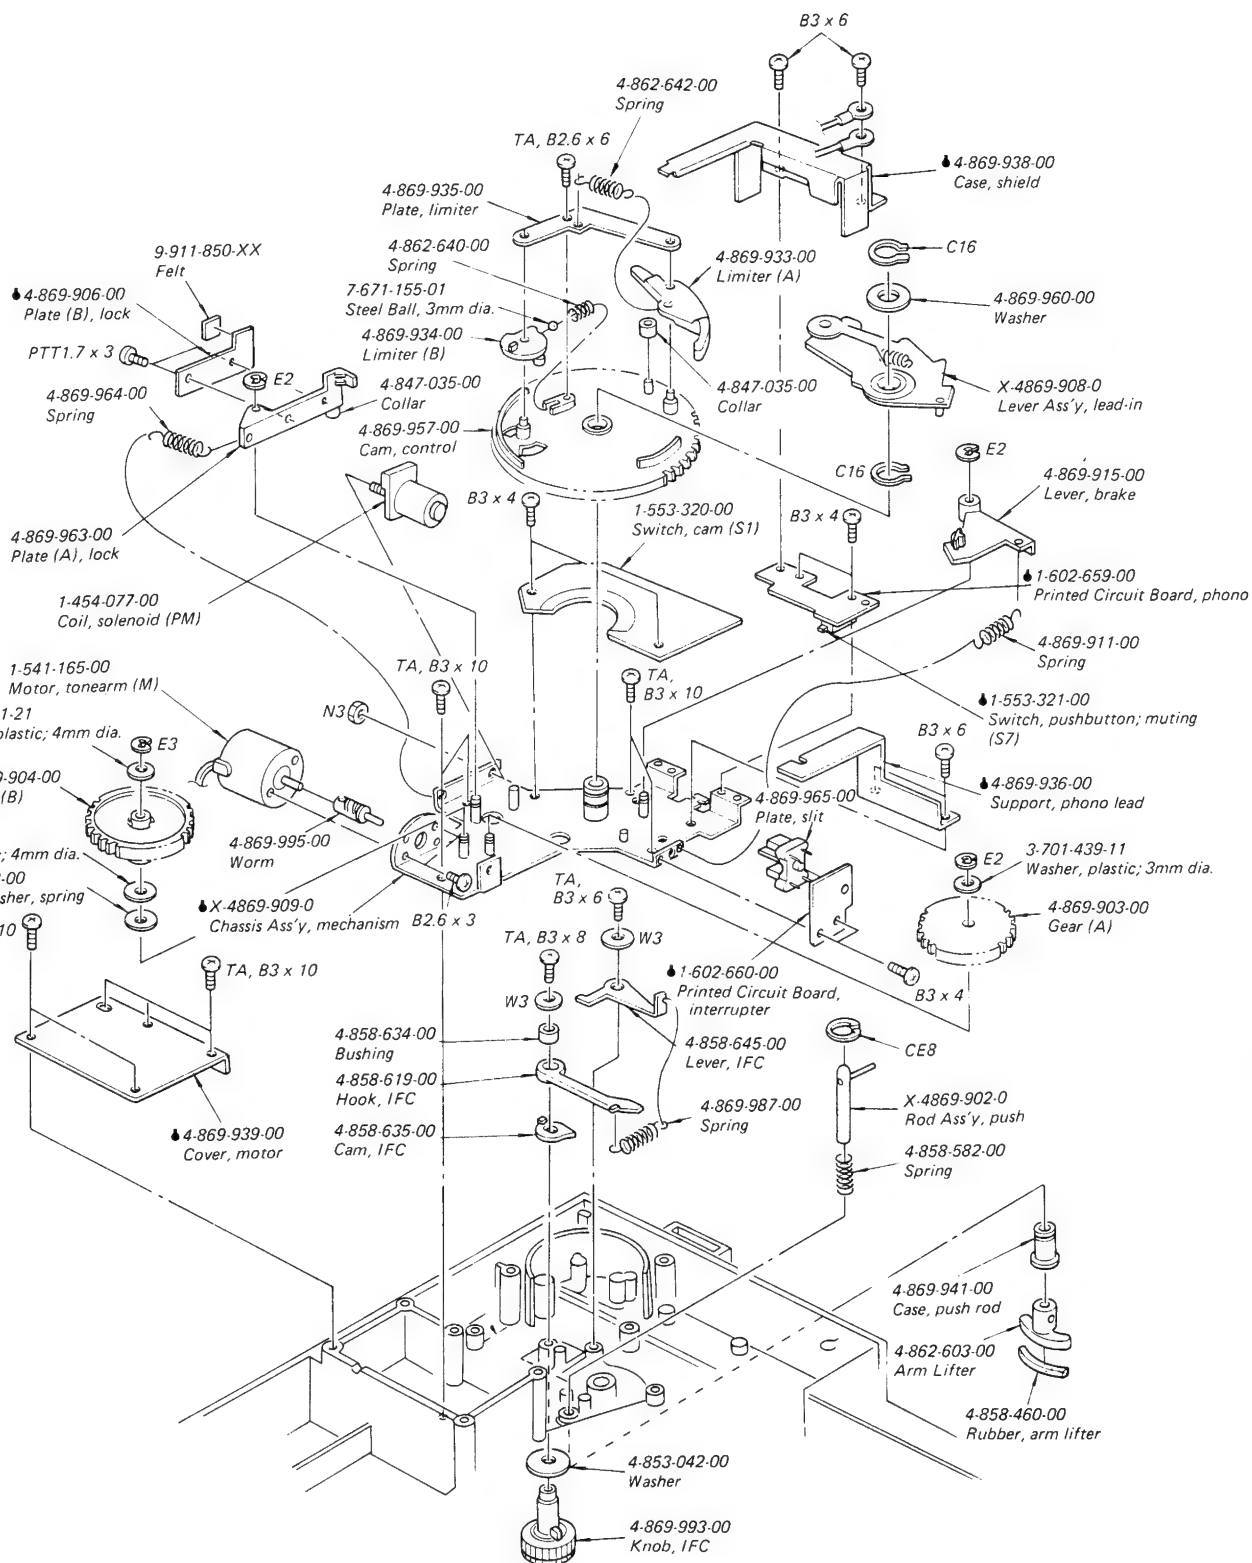

(4)

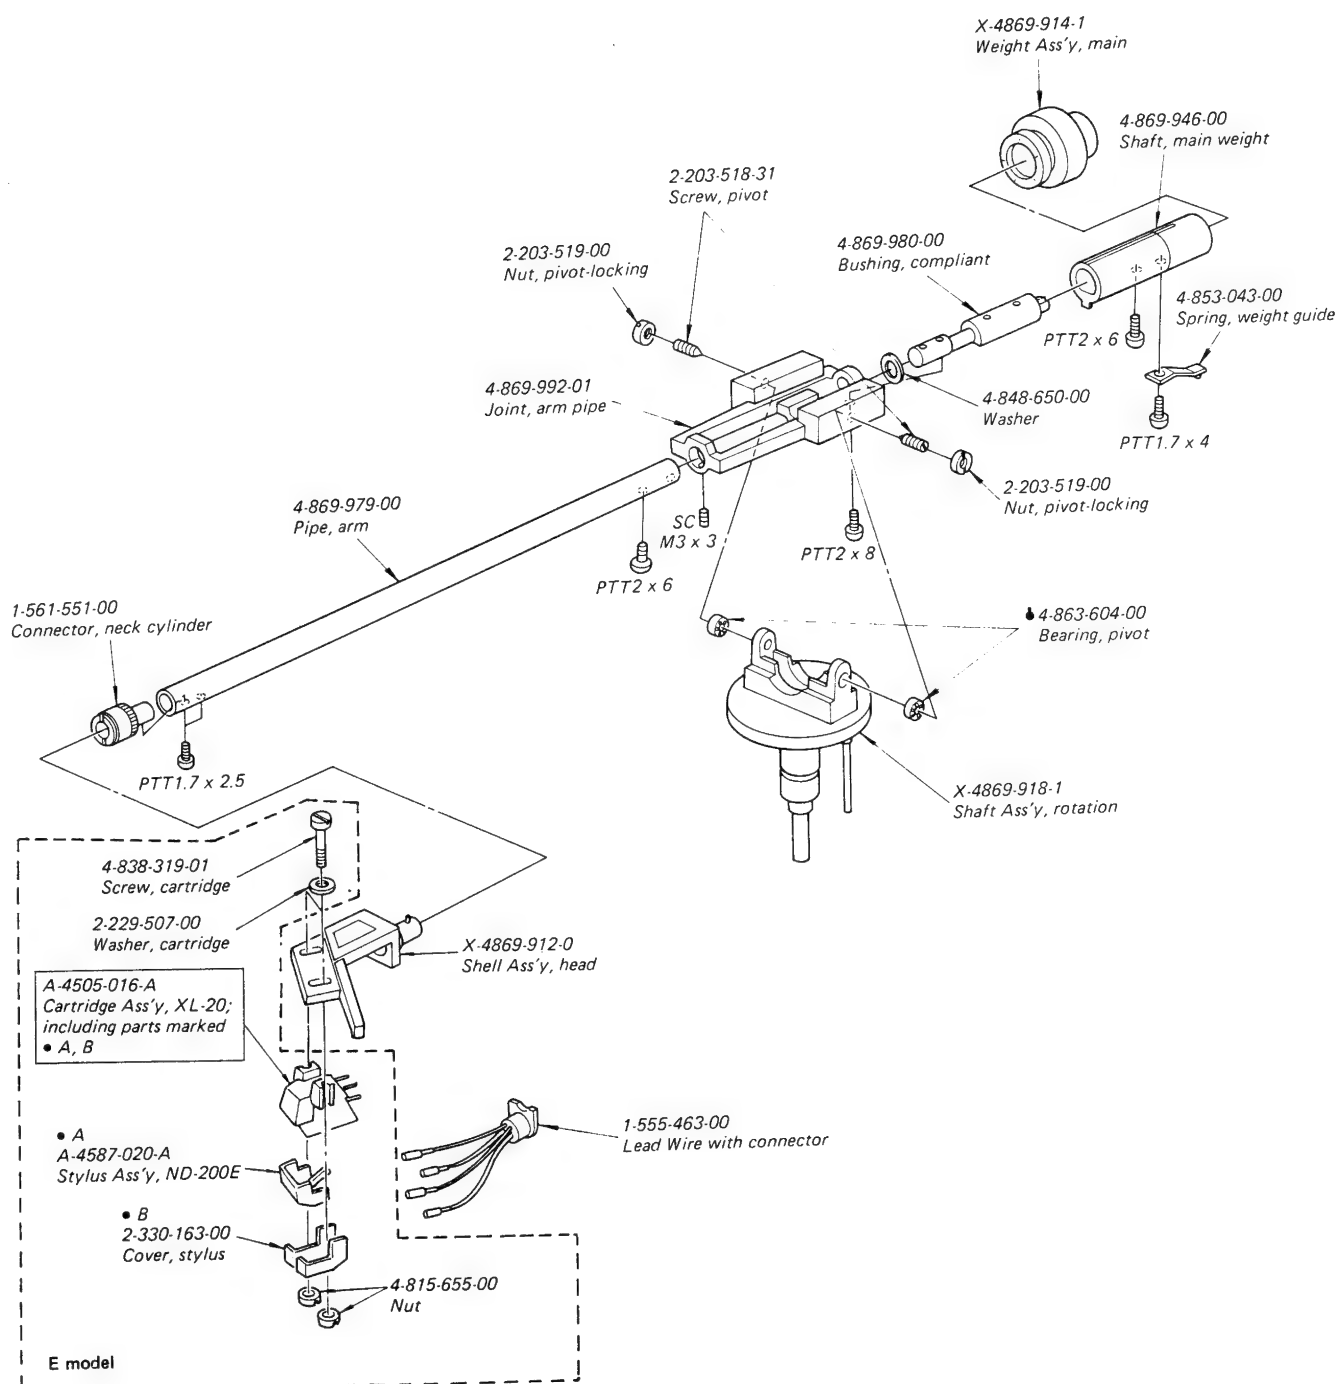

# SECTION 6

## ELECTRICAL PARTS LIST

Ref. No.   Part No.   Description

### SEMICONDUCTORS

#### Transistors

Q101, 102   8-729-141-43   2SD414  
 Q103   8-729-154-83   2SB548  
 ⇒ Q104   8-729-612-77   2SA1027R  
 ⇒ Q201-203   8-729-663-47   2SC1364  
 ⇒ Q204   8-729-612-77   2SA1027R

Q301   8-729-141-43   2SD414  
 Q302   8-729-154-83   2SB548  
 Q303   8-729-141-43   2SD414  
 Q304   8-729-154-83   2SB548

⇒ Q401, 402   8-729-612-77   2SA1027R  
 ⇒ Q403-410   8-729-663-47   2SC1364  
 ⇒ Q411   8-760-413-10   2SC1475  
 ⇒ Q412   8-729-663-47   2SC1364  
 ⇒ Q413   8-729-413-10   2SC1475

Q414   8-729-141-43   2SD414  
 Q415   8-729-154-83   2SB548  
 Q701, 702   8-729-101-01   PH101  
 Q801   8-729-101-13   PH103

#### ICs

IC201   8-751-930-00   CX193  
 IC202   8-759-145-57   μPC4557C  
 IC301   8-759-145-58   μPC4558C  
 IC401   8-759-154-35   μPD554C035  
 ⇒ IC402   8-759-140-49   μPD4049C

IC403   8-759-145-58   μPC4558C

#### Diodes

D101-104   8-719-200-02   10E2  
 ⇒ D105   8-719-930-12   EQB01-12Z  
 ⇒ D106   8-719-931-06   EQB01-06  
 ⇒ D201   8-719-931-06   EQB01-06  
 ⇒ D403, 404   8-719-815-55   1S1555

D405   8-719-200-02   10E2  
 ⇒ D406   8-719-815-55   1S1555  
 D501-504   8-719-311-20   SEL1120R

⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

**Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.**






Ref. No.   Part No.   Description

D505   8-719-313-20   SEL1320G  
 D601, 602   8-719-311-20   SEL1120R  
 D801   8-719-101-11   SR110

H1, H2   8-719-905-07   5GF-MS-07F



### CAPACITORS


Common capacitors are omitted. Refer to the lists on pages 32 and 33 for their part numbers.

C101	{	 1-161-744-00	0.01μF	400V	ceramic (AEP, E model)
		 1-130-230-00	0.01μF	300V	film (UK model)
		 1-130-233-00	0.033μF	125V	film (US model)
		 1-130-098-00	0.022μF	125V	film (Canadian model)
C102-105	 1-123-498-00	1000μF	25V	electrolytic	
C210	1-102-491-00	51pF	50V	ceramic	


### RESISTORS

All resistors are in ohms. Common ¼W carbon resistors are omitted. Refer to the list on page 34 for their part numbers.

R101, 102	 1-217-397-00	68	¼W	fusible
R103	 1-217-393-00	33	¼W	fusible
R104	1-244-881-00	2.2k	½W	carbon
R105	1-244-873-00	1k	½W	carbon
R106	1-213-130-00	82	½W	carbon

R433	1-244-825-00	10	½W	carbon
R439	1-244-853-00	150	½W	carbon
R440	1-244-841-00	47	½W	carbon
R445, 446	 1-217-397-00	68	¼W	fusible

RV201	{	1-226-433-00	50k-B, adjustable; 33rpm (US model: serial No. up to 801,000) (AEP model: serial No. up to 501,100) (UK model: serial No. up to 601,000)
		1-226-759-00	50k-B, adjustable; 33rpm (US model: serial No. 801,001 and later) (AEP model: serial No. 501,101 and later) (UK model: serial No. 601,001 and later) (Canadian, E model)

**Note: Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.**

- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
RV202	1-226-434-00	100k-B, adjustable; 45rpm (US model: serial No. up to 801,000) (AEP model: serial No. up to 501,100) (UK model: serial No. up to 601,000)
	1-226-938-00	100k-B, adjustable; 45rpm (US model: serial No. 801,001 and later) (AEP model: serial No. 501,101 and later) (UK model: serial No. 601,001 and later) (Canadian, E model)
	RV301, 302	1-226-235-00 5k-B, adjustable; gain
	RV303, 304	1-226-239-00 100k-B, adjustable; offset

## MISCELLANEOUS

HMG	1-543-123-00	Head, speed-detecting
L401	1-408-096-00	Coil, 470μH; microinductor
M	1-541-165-00	Motor, tonearm
PL	1-518-305-00	Lamp
PM	1-454-077-00	Coil, solenoid
S1	1-553-320-00	Switch, cam
S2	1-553-235-00	Switch, pushbutton; START/STOP
S3	1-553-235-00	Switch, pushbutton; SPEED
S4	1-553-235-00	Switch, pushbutton; ARM
S5	1-553-235-00	Switch, pushbutton; REPEAT
S6	▲1-553-318-00	Switch, pushbutton; POWER (AEP, UK, E model)
	▲1-553-352-00	Switch, pushbutton; POWER (US model)
	▲1-553-418-00	Switch, pushbutton; POWER (Canadian model)
S7	1-553-321-00	Switch, pushbutton; muting
T1	▲1-446-793-00	Transformer, power (US, Canadian model)
	▲1-446-794-00	Transformer, power (AEP, UK model)
	▲1-446-851-00	Transformer, power (E model)
X201	1-527-380-00	Crystal, OSC
	1-462-161-00	Coil, motor
	▲1-534-817-XX	Cord, power (AEP model)
	▲1-534-986-XX	Cord, power (US, Canadian model)
	1-551-063-21	Cord, phono; with connector
	▲1-551-473-31	Cord, power; parallel-blade plug (E2 model)
	▲1-551-530-00	Cord, power; euro-plug (E1 model)
	▲1-551-884-00	Cord, power (UK model)
	▲1-552-535-00	Voltage Selector (E model)
	1-555-463-00	Lead Wire with connector
	1-561-551-XX	Connector, neck cylinder

Note: The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------	-----------------	--------------------

## COMPLETE CIRCUIT BOARDS

▲ A-4619-152-A	Main (US model)
▲ A-4619-153-A	Main (AEP, E model)
▲ A-4619-154-A	Main (UK model)
▲ A-4619-160-A	Main (Canadian model)

## PRINTED CIRCUIT BOARDS

▲ 1-602-653-00	Motor
▲ 1-602-654-00	Switch (A)
▲ 1-602-655-00	Switch (B)
▲ 1-602-656-00	Size (B)
▲ 1-602-657-00	Size (A)
▲ 1-602-658-00	Lamp
▲ 1-602-659-00	Phono
▲ 1-602-660-00	Interrupter

## ACCESSORIES AND PACKING MATERIALS

<u>Part No.</u>	<u>Description</u>
X-4869-912-0	Shell Ass'y, head
X-4869-915-0	Screw Ass'y, cartridge
3-701-634-00	Bag, plastic; for turntable
3-701-630-00	Bag, plastic; for instruction manual
3-701-616-00	Bag, plastic; for head shell
3-701-806-00	Adaptor, 45rpm
3-783-188-11	Manual, instruction (AEP, UK, E model)
3-783-188-21	Manual, instruction (US model)
3-783-188-21	Manual, instruction (Canadian model)
3-794-902-31	Manual, instruction (Canadian model)
4-847-314-00	Bag, protection; for set
4-848-002-00	Cushion, arm pipe
4-862-043-00	Cushion, tonearm
4-862-680-00	Protector
4-869-959-00	Plate, light interception
4-869-962-00	Adjuster, drop-point
4-869-974-00	Carton, for accessories
4-869-975-00	Cushion, right
4-869-976-00	Cushion, left
4-869-977-00	Case, accessories
4-869-981-00	Sub-weight
4-869-996-00	Carton
4-870-529-00	Case, head shell (US, AEP, UK model)

Note: Les composants identifiés par une trame et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

# **ELECTROLYTIC CAPACITORS**

RATING → : Use the high voltage rated one.						
CAP. (μF)	6.3 VOLT.	10 VOLT.	16 VOLT.	25 VOLT.	35 VOLT.	50 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.47						1-121-726-00
1.0						1-121-391-00
2.2						1-121-450-00
3.3	→	→	→	1-121-392-00	→	1-121-393-00
4.7	→	→	→	1-121-395-00	→	1-121-396-00
10	→	→	1-121-651-00	1-121-398-00	→	1-121-738-00
22	→	→	1-121-479-00	1-121-480-00	1-121-662-00	1-121-152-00
33	→	→	1-121-403-00	1-121-404-00	1-121-652-00	1-121-405-00
47	→	1-121-352-00	1-121-409-00	1-121-410-00	1-121-653-00	1-121-411-00
100	→	1-121-414-00	1-121-415-00	1-121-416-00	1-121-357-00	1-121-417-00
220	1-121-419-00	1-121-420-00	1-121-421-00	1-121-422-00	1-121-261-00	1-121-423-00
330	1-121-751-00	1-121-805-00	1-121-521-00	1-121-654-00	1-121-655-00	1-121-656-00
470	1-121-424-00	1-121-425-00	1-121-426-00	1-121-733-00	1-121-361-00	1-121-810-00
1000	—	1-121-736-00	1-121-245-00	1-121-657-00	1-121-388-00	1-123-061-00
2200	1-121-658-00	1-121-659-00	1-121-660-00	1-123-067-00	1-121-984-00	—
3300	1-121-661-00	1-123-075-00	1-123-071-00	—	—	—

CAP. (μF)	100 VOLT.	160 VOLT.	250 VOLT.	350 VOLT.
	PART No.	PART No.	PART No.	PART No.
0.47	—	—	—	—
1.0	1-123-249-00	1-123-252-00	1-123-003-00	1-121-168-00
2.2	1-123-250-00	1-123-026-00	—	1-123-028-00
3.3	1-121-995-00	—	1-123-004-00	1-123-006-00
4.7	1-123-255-00	1-121-246-00	1-121-759-00	1-123-007-00
10	1-121-126-00	1-121-999-00	1-123-254-00	1-123-008-00
22	1-121-996-00	1-123-253-00	1-123-005-00	1-123-022-00
33	1-121-997-00	1-121-757-00	—	—
47	1-123-251-00	1-121-919-00	—	—
100	1-123-084-00	—	—	—

## **CERAMIC CAPACITORS**

RATING							
CAP. (pF)	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (μF)	50 VOLT.
	PART No.		PART No.		PART No.		PART No.
0.5	1-101-837-00	22	1-102-959-00	150	1-101-361-00	0.001	1-102-074-00
0.75	1-101-586-00	24	1-102-960-00	160	1-101-367-00	0.0012	1-102-118-00
1.0	1-102-934-00	27	1-102-961-00	180	1-102-976-00	0.0015	1-102-119-00
1.5	1-101-576-00	30	1-102-962-00	200	1-102-977-00	0.0018	1-102-120-00
2.0	1-102-935-00	33	1-102-963-00	220	1-102-978-00	0.0022	1-102-121-00
3	1-102-936-00	36	1-102-964-00	240	1-102-979-00	0.0027	1-102-122-00
4	1-102-937-00	39	1-102-965-00	270	1-102-980-00	0.0033	1-102-123-00
5	1-102-942-00	43	1-102-966-00	300	1-102-981-00	0.0039	1-102-124-00
6	1-102-943-00	47	1-101-880-00	330	1-102-820-00	0.0047	1-102-125-00
7	1-102-944-00	51	1-101-882-00	360	1-102-821-00	0.0056	1-102-126-00
8	1-102-945-00	56	1-101-884-00	390	1-102-822-00	0.0068	1-102-127-00
9	1-102-946-00	62	1-101-886-00	430	1-102-823-00	0.0082	1-102-128-00
10	1-102-947-00	68	1-101-888-00	470	1-102-824-00	0.01	1-102-129-00
11	1-102-948-00	75	1-101-890-00	510	1-101-059-00	0.022	1-101-005-00
12	1-102-949-00	82	1-102-971-00	560	1-102-115-00	0.047	1-101-006-00
13	1-102-950-00	91	1-102-972-00	680	1-102-116-00		
15	1-102-951-00	100	1-102-973-00	820	1-102-117-00		
16	1-102-952-00	110	1-102-815-00				
18	1-102-953-00	120	1-102-816-00				
20	1-102-958-00	130	1-101-081-00				

0.001μF = 1,000pF

## **CERAMIC (SEMICONDUCTOR) CAPACITORS**

RATING → : Use the high voltage rated one.					
CAP. (μF)	25 VOLT.	50 VOLT.	CAP. (μF)	25 VOLT.	50 VOLT.
	PART No.	PART No.		PART No.	PART No.
0.001	→	1-161-039-00	0.018	1-161-016-00	1-161-054-00
0.0012	→	1-161-040-00	0.022	1-161-017-00	1-161-055-00
0.0015		1-161-041-00	0.027	1-161-018-00	1-161-056-00
0.0018		1-161-042-00	0.033	1-161-019-00	1-161-057-00
0.0022		1-161-043-00	0.039	1-161-010-00	1-161-058-00
0.0027	→	1-161-044-00	0.047	1-161-021-00	1-161-059-00
0.0033	→	1-161-045-00	0.056	→	1-161-060-00
0.0039	→	1-161-046-00	0.068	→	1-161-061-00
0.0047	→	1-161-047-00	0.082	1-161-024-00	1-161-062-00
0.0056	→	1-161-048-00	0.1	1-161-025-00	1-161-063-00
0.0068	→	1-161-049-00			
0.0082	1-161-012-00	1-161-050-00			
0.01	1-161-013-00	1-161-051-00			
0.012	→	1-161-052-00			
0.015	1-161-015-00	1-161-053-00			

## MYLAR CAPACITORS


MYLAR CAPACITORS												
RATING												
CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	
	PART No.	PART No.	PART No.		PART No.	PART No.	PART No.		PART No.			
0.001	1-108-227-00	1-108-365-00	1-108-409-00	0.01	1-108-239-00	1-108-377-00	1-108-421-00	0.1	1-108-251-00	1-108-389-00	1-108-433-00	
0.0012	1-108-351-00	1-108-366-00	1-108-410-00	0.012	1-108-357-00	1-108-378-00	1-108-422-00	0.12	1-108-363-00	1-108-390-00	1-108-434-00	
0.0015	1-108-228-00	1-108-367-00	1-108-411-00	0.015	1-108-240-00	1-108-379-00	1-108-423-00	0.15	1-108-252-00	1-108-391-00	1-108-435-00	
0.0018	1-108-352-00	1-108-368-00	1-108-412-00	0.018	1-108-358-00	1-108-380-00	1-108-424-00	0.18	1-108-364-00	1-108-392-00	1-108-436-00	
0.0022	1-108-230-00	1-108-369-00	1-108-413-00	0.022	1-108-242-00	1-108-381-00	1-108-425-00	0.22	1-108-254-00	1-108-393-00	1-108-437-00	
0.0027	1-108-353-00	1-108-370-00	1-108-414-00	0.027	1-108-359-00	1-108-382-00	1-108-426-00	0.27	1-108-854-00	—	—	
0.0033	1-108-232-00	1-108-371-00	1-108-415-00	0.033	1-108-244-00	1-108-383-00	1-108-427-00	0.33	1-108-855-00	—	—	
0.0039	1-108-354-00	1-108-372-00	1-108-416-00	0.039	1-108-360-00	1-108-384-00	1-108-428-00	0.39	1-108-856-00	—	—	
0.0047	1-108-234-00	1-108-373-00	1-108-417-00	0.047	1-108-246-00	1-108-385-00	1-108-429-00	0.47	1-108-857-00	—	—	
0.0056	1-108-355-00	1-108-374-00	1-108-418-00	0.056	1-108-361-00	1-108-386-00	1-108-430-00					
0.0068	1-108-237-00	1-108-375-00	1-108-419-00	0.068	1-108-249-00	1-108-387-00	1-108-431-00					
0.0082	1-108-356-00	1-108-376-00	1-108-420-00	0.082	1-108-362-00	1-108-388-00	1-108-432-00					

## TANTALUM CAPACITORS



RATING → Use the high voltage rated one.							
CAP. (μF)	3.15 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	25 VOLT.	35 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.01					→	→	1-131-396-00
0.015					→	→	1-131-397-00
0.022					→	→	1-131-398-00
0.033					→	→	1-131-399-00
0.047					→	→	1-131-400-00
0.068					→	→	1-131-401-00
0.1					→	→	1-131-402-00
0.15					→	→	1-131-403-00
0.22					→	→	1-131-404-00
0.33					→	1-131-409-00	1-131-405-00
0.47	—	—	—	—	1-131-412-00	→	1-131-406-00
0.68	—	—	—	1-131-415-00	→	1-131-410-00	1-131-407-00
1.0	—	—	1-131-418-00	1-131-416-00	1-131-413-00	→	1-131-408-00
1.5	—	1-131-421-00	—	—	→	1-131-411-00	1-131-348-00
2.2	1-131-424-00	—	1-131-419-00	—	1-131-414-00	1-131-355-00	1-131-349-00
3.3	—	1-131-422-00	—	1-131-417-00	1-131-362-00	1-131-356-00	1-131-350-00
4.7	1-131-425-00	—	1-131-420-00	1-131-369-00	1-131-363-00	1-131-357-00	1-131-351-00
6.8	—	1-131-423-00	1-131-376-00	1-131-370-00	1-131-364-00	1-131-358-00	1-131-352-00
10	1-131-426-00	1-131-383-00	1-131-377-00	1-131-371-00	1-131-365-00	1-131-359-00	1-131-353-00
15	1-131-390-00	1-131-384-00	1-131-378-00	1-131-372-00	1-131-366-00	1-131-360-00	—
22	1-131-391-00	1-131-385-00	1-131-379-00	1-131-373-00	1-131-367-00		
33	1-131-392-00	1-131-386-00	1-131-380-00	1-131-374-00			
47	1-131-393-00	1-131-387-00	1-131-381-00	—			
68	1-131-394-00	1-131-388-00	—	—			
100	1-131-395-00	—	—	—			

## TANTALUM CAPACITORS

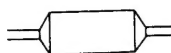

RATING						
CAP. (μF)	3 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	35 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.033						1-131-273-00
0.047						1-131-274-00
0.068						1-131-275-00
0.1						1-131-276-00
0.15						1-131-277-00
0.22					1-131-262-00	1-131-278-00
0.33					1-131-263-00	1-131-279-00
0.47			1-131-169-00		1-131-264-00	1-131-280-00
0.68			—	1-131-258-00	1-131-265-00	1-131-281-00
1.0			1-131-254-00	—	1-131-266-00	1-131-282-00
1.5		1-131-250-00	—		1-131-267-00	1-131-283-00
2.2		—	—	1-131-259-00	1-131-268-00	1-131-284-00
3.3		—	1-131-255-00	—	1-131-269-00	—
4.7		1-131-251-00	1-131-171-00	—	1-131-270-00	—
6.8		—	—	1-131-260-00	1-131-271-00	—
10	—	—	1-131-256-00	—	1-131-272-00	—
15	—	—	—	1-131-261-00		
22	—	1-131-252-00	1-131-257-00	—		
33	1-131-176-00	1-131-253-00	1-131-173-00	—		
47	1-131-288-00	1-131-174-00	—	—		
100	1-131-177-00					




## 1/4 WATT CARBON RESISTORS

$\Omega$	Part No.	$\Omega$	Part No.	$\Omega$	Part No.	$\Omega$	Part No.	$\Omega$	Part No.	$\Omega$	Part No.
1.0	1-246-401-00	10	1-246-425-00	100	1-246-449-00	1.0k	1-246-473-00	10k	1-246-497-00	100k	1-246-521-00
1.1	1-246-402-00	11	1-246-426-00	110	1-246-450-00	1.1k	1-246-474-00	11k	1-246-498-00	110k	1-246-522-00
1.2	1-246-403-00	12	1-246-427-00	120	1-246-451-00	1.2k	1-246-475-00	12k	1-246-499-00	120k	1-246-523-00
1.3	1-246-404-00	13	1-246-428-00	130	1-246-452-00	1.3k	1-246-576-00	13k	1-246-500-00	130k	1-246-524-00
1.5	1-246-405-00	15	1-246-429-00	150	1-246-453-00	1.5k	1-246-577-00	15k	1-246-501-00	150k	1-246-525-00
1.6	1-246-406-00	16	1-246-430-00	160	1-246-454-00	1.6k	1-246-578-00	16k	1-246-502-00	160k	1-246-526-00
1.8	1-246-407-00	18	1-246-431-00	180	1-246-455-00	1.8k	1-246-579-00	18k	1-246-503-00	180k	1-246-527-00
2.0	1-246-408-00	20	1-246-432-00	200	1-246-456-00	2.0k	1-246-580-00	20k	1-246-504-00	200k	1-246-528-00
2.2	1-246-409-00	22	1-246-433-00	220	1-246-457-00	2.2k	1-246-581-00	22k	1-246-505-00	220k	1-246-529-00
2.4	1-246-410-00	24	1-246-434-00	240	1-246-458-00	2.4k	1-246-582-00	24k	1-246-506-00	240k	1-246-530-00
2.7	1-246-411-00	27	1-246-435-00	270	1-246-459-00	2.7k	1-246-583-00	27k	1-246-507-00	270k	1-246-531-00
3.0	1-246-412-00	30	1-246-436-00	300	1-246-460-00	3.0k	1-246-584-00	30k	1-246-508-00	300k	1-246-532-00
3.3	1-246-413-00	33	1-246-437-00	330	1-246-461-00	3.3k	1-246-585-00	33k	1-246-509-00	330k	1-246-533-00
3.6	1-246-414-00	36	1-246-438-00	360	1-246-462-00	3.6k	1-246-586-00	36k	1-246-510-00	360k	1-246-534-00
3.9	1-246-415-00	39	1-246-439-00	390	1-246-463-00	3.9k	1-246-587-00	39k	1-246-511-00	390k	1-246-535-00
4.3	1-246-416-00	43	1-246-440-00	430	1-246-464-00	4.3k	1-246-488-00	43k	1-246-512-00	430k	1-246-536-00
4.7	1-246-417-00	47	1-246-441-00	470	1-246-465-00	4.7k	1-246-489-00	47k	1-246-513-00	470k	1-246-537-00
5.1	1-246-418-00	51	1-246-442-00	510	1-246-466-00	5.1k	1-246-490-00	51k	1-246-514-00	510k	1-246-538-00
5.6	1-246-419-00	56	1-246-443-00	560	1-246-467-00	5.6k	1-246-491-00	56k	1-246-515-00	560k	1-246-539-00
6.2	1-246-420-00	62	1-246-444-00	620	1-246-468-00	6.2k	1-246-492-00	62k	1-246-516-00	620k	1-246-540-00
6.8	1-246-421-00	68	1-246-445-00	680	1-246-469-00	6.8k	1-246-493-00	68k	1-246-517-00	680k	1-246-541-00
7.5	1-246-422-00	75	1-246-446-00	750	1-246-470-00	7.5k	1-246-494-00	75k	1-246-518-00	750k	1-246-542-00
8.2	1-246-423-00	82	1-246-447-00	820	1-246-471-00	8.2k	1-246-495-00	82k	1-246-519-00	820k	1-246-543-00
9.1	1-246-424-00	91	1-246-448-00	910	1-246-472-00	9.1k	1-246-496-00	91k	1-246-520-00	910k	1-246-544-00

## HARDWARE NOMENCLATURE


Screw:

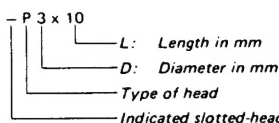

Indicated slotted-head only.

Unless otherwise indicated, it means cross-recessed head (Phillips type).

Nut, Washer, Retaining ring:

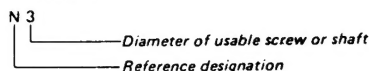

Reference Designation	Shape	Description	Remarks
SCREWS			
P		pan-head screw	binding-head (B) screw for replacement
PWH		pan-head screw with washer face	binding-head (B) screw and flat washer for replacement
PS PSP		pan-head screw with spring washer	binding-head (B) screw and spring washer for replacement
PSW PSPW		pan-head screw with spring and flat washers	binding-head (B) screw and spring and flat washers for replacement
R		round-head screw	binding-head (B) screw for replacement
K		flat-countersunk-head screw	
RK		oval-countersunk-head screw	
B		binding-head screw	
T		truss-head screw	binding-head (B) screw for replacement
F		flat-fillister-head screw	
RF		fillister-head screw	
BV		braizer-head screw	

Reference Designation	Shape	Description	Remarks
SELF-TAPPING SCREWS			
TA		self-tapping screw	ex: TA, P 3 x 10
PTP		pan-head self-tapping screw	binding-head self-tapping (TA, B) screw for replacement
PTPWH		pan-head self-tapping screw with washer face	binding-head self-tapping (TA, B) screw and flat washer for replacement
PTTWH		pan-head thread-rolling screw with washer face	binding-head (B) screw and flat washer for replacement
SET SCREWS			
SC		set screw	
SC		hexagon-socket set screw	ex: SC 2.6 x 4, hexagon socket
NUT			
N		nut	
WASHERS			
W		flat washer	
SW		spring washer	
LW		internal-tooth lock washer	ex: LW3, internal
LW		external-tooth lock washer	ex: LW3, external
RETAINING RINGS			
E		retaining ring	
G		grip-type retaining ring	

Sony Corporation

© 1980